



NOTES: 1) SET EACH HUB FOR A SINGLE DOOR.

2) DOOR CONTROL "A" HARNESS FROM EACH HUB WILL GO TO IT'S RESPECTIVE CONTROL.
DOOR CONTROL "B" HARNESS FROM EACH HUB WILL GO TO THE OPPOSITE CONTROL.
IN THIS CONFIGURATION DOORS WILL STALL INDEPENDANTLY.

TYPICAL WIRING: WHITE- COMMON, GREEN- ACTIVATION, WHITE/RED- STALL COMMON, GREEN/RED- STALL, WHITE/BLACK- COMMON, GREEN/RED- SAFETY

3) SEE LZR MICROSCAN USERS GUIDE FOR COMPLETE INSTALLATION INSTRUCTIONS.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM

100 ENTERPRISE DRIVE
PITTSBURGH, PA 15275
PHONE: (412) 249-4100
FAX: (412) 249-4101
EMAIL: www.beasensors.com

TITLE:

LZR MICROSCANS ON DUAL EGRESS
REVERSE APPLICATIONS

SIZE:	DRAWN BY:	REV BY:	PART NO:
A	WJR	WJR	80.0359.02
SCALE:	DATE:	SHEET	
NONE	04232019	1 OF 1	