



MOUNTING HEIGHT RANGE: 75 – 98”
(measured from finished floor to sensor LED)

Print settings must be set to “ACTUAL SIZE.”

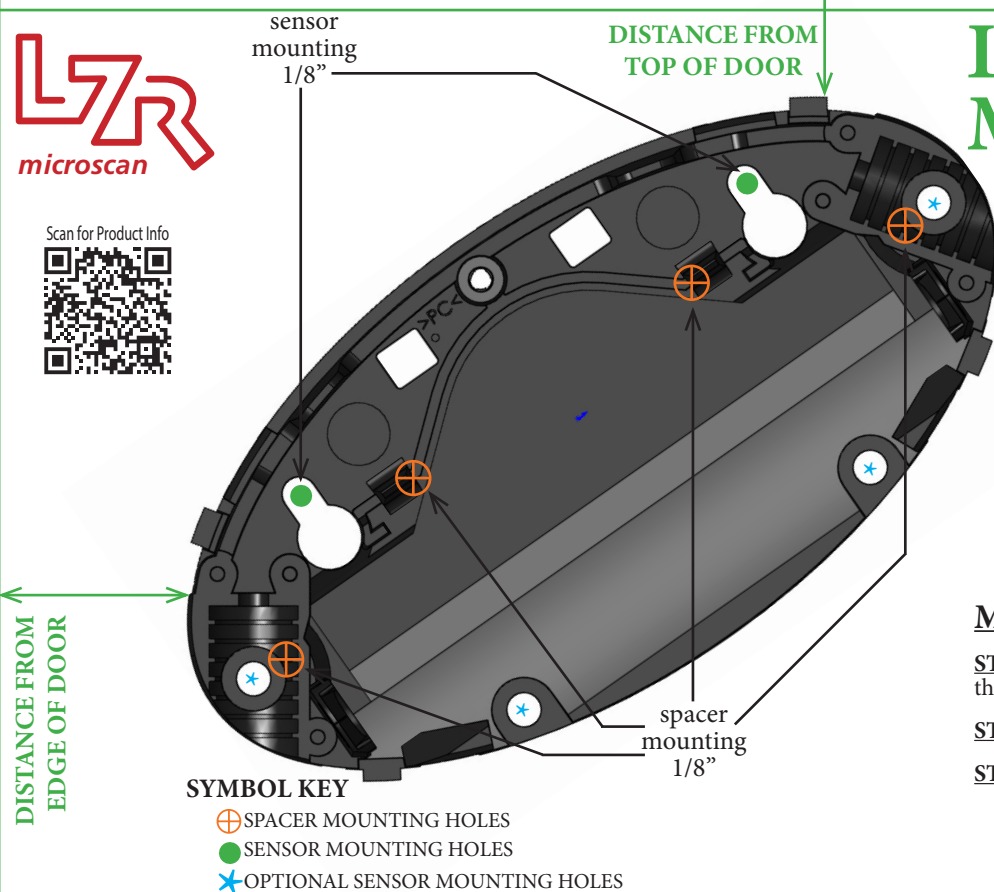

LEFT MOUNT

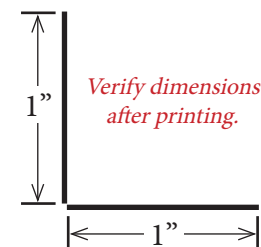

NOTES (READ PRIOR TO MOUNTING):

Survey both sides of door to determine appropriate mounting location (distance from pivot edge and distance from top of door), taking into account the frame clearance, finger guard, door arm, etc. Sensors are to be mounted as close to the top of the door and as close to the hinge of the door as possible.

Spacer required for applications with hardware extending across width of door and protruding more than 2 in.

For narrow-style aluminum doors, mounting arm kit may be used. When using mounting arm kit, do not use this template.

MOUNTING INSTRUCTIONS

STEP 1: Fold along appropriate horizontal and vertical lines and then align with pivot edge and top of door.

STEP 2: Mark and drill two (2) holes.*

STEP 3: Flip template and repeat for right sensor.

* When using spacer, drill any two (2) spacer mounting holes instead of sensor mounting holes.

* When using optional mounting holes, it may be necessary to remove end caps or sensor from base.

Reference LZR-microscan T User's Guide 75.5753 for full installation instructions


75.5924.01 LZR-MICROSCAN T Y-HARNESS MOUNTING TEMPLATE 20180614

MOUNTING HEIGHT RANGE: 75 – 98"
(measured from finished floor to sensor LED)

Print settings must be set to "ACTUAL SIZE."

RIGHT MOUNT

Verify dimensions
after printing.

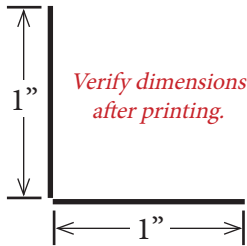

NOTES (READ PRIOR TO MOUNTING):

Survey both sides of door to determine appropriate mounting location (distance from pivot edge and distance from top of door), taking into account the frame clearance, finger guard, door arm, etc. Sensors are to be mounted as close to the top of the door and as close to the hinge of the door as possible.

Spacer required for applications with hardware extending across width of door and protruding more than 2 in.

For narrow-style aluminum doors, mounting arm kit may be used. When using mounting arm kit, do not use this template.

MOUNTING INSTRUCTIONS


STEP 1: Fold along appropriate horizontal and vertical lines and then align with pivot edge and top of door.

STEP 2: Mark and drill two (2) holes.*

STEP 3: Flip template and repeat for right sensor.

* When using spacer, drill any two (2) spacer mounting holes instead of sensor mounting holes.

* When using optional mounting holes, it may be necessary to remove end caps or sensor from base.

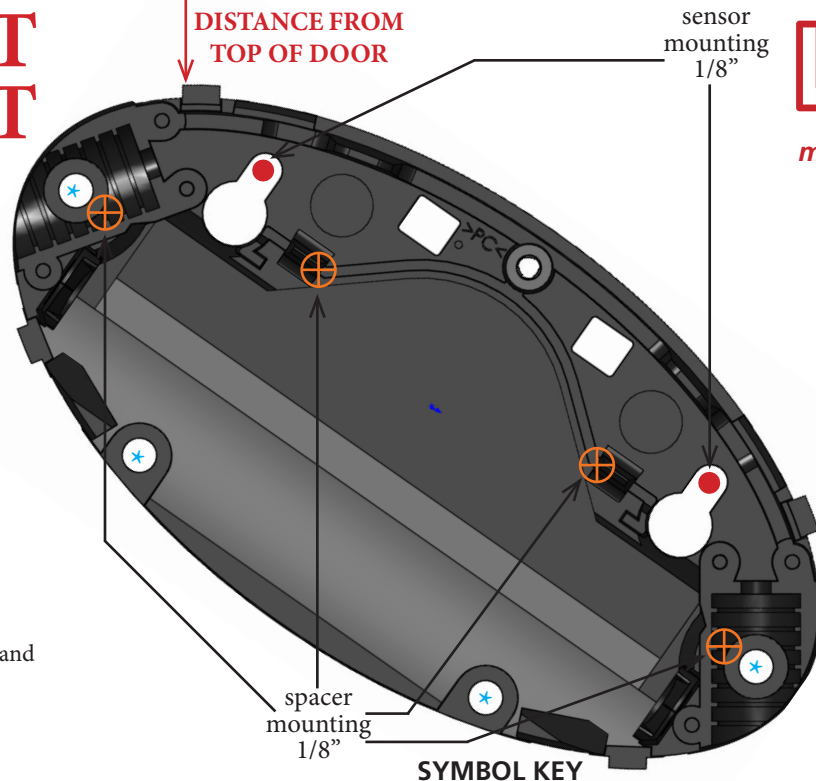

SYMBOL KEY

- ⊕ SPACER MOUNTING HOLES
- SENSOR MOUNTING HOLES
- ★ OPTIONAL SENSOR MOUNTING HOLES

MOST CENTER PIVOT

MOST BUTT HUNG

DISTANCE FROM
EDGE OF DOOR

Reference LZR-microscan T User's Guide 75.5753 for full installation instructions

75.5924.01 LZR-MICROSCAN T Y-HARNESS MOUNTING TEMPLATE 20180614