# SENSORIO.COM

LZR®-SIGMA's online device and user management portal



CONTENTS

Login Screen	2
Home Page	3
Devices	4
Device Information	5
Device Information - Define Company	6
Device Information - Define Site	7
Device Information - Define Data Push Agent	8
Device Information - Individual Device	9
Users	12
User Information	13
User Information - Add User	14
User Information - Change Access	
User Information - Delete User	18
External Data Access (API)	19

# INTRODUCTION

The purpose of this tutorial is to provide COMPANY ADMINISTRATORS and DEVICE MANAGERS with an overview of the online device and user management portal for LZR<sup>®</sup>-SIGMA.

#### LOGIN SCREEN

Only users with Company Administrator and Device Manager level access have access to the portal.



Any user with Installer and Enduser level access will receive a prompt to use the LZR®-SIGMA mobile app.



Any user assigned "No Access" will receive a "No access" message.



#### **HOME PAGE**

- Company Administrator
- Device Manager

DEV	1) (2 NCES USI	2) 3 ERS EXTERNAL DATA	ACCESS (API)				7 Search	
ò.	status 🗸	DEVICE ID	COMPANY(SITE)		INST. ON	INST. BY	DATA PUS V	21 DEVICES
9)	•	неетсв	Discount Groceries (Store 54)	United States (Pittsbu rgh)	10 August 2020	Chris Rgetti	•	Online     Online Ethernet
0		H6681A	BEA Inc. (BEA Occupe ncy Test)	United States (Pittsburgh)	11 June 2020	Tim Chiappetta	*	Offline Ethernet
	1	H785F1	BEA Inc. (BEA Occupe ncy Test)	United States (Pittsburgh)	10 june 2020	Tim Chiappetta		8
0	•	HAEC63	Discours Groceries (Store 27)	United States (Pittsburgh)	9 June 2020	Chris Rigsto	2	
	•	H74419	BEA Inc. (BEA US HQ)	United States (Pritsbu rgh)	5 May 2020	Tim Chiappetta	<ul> <li>•</li> </ul>	
	•	HC43AB	BEA Inc. (BEA US HQ)	United States (Pittstur rgh)	30 April 2020	Tim Chiappetta	BEAAnalyti cs	
		H03848			12 February 202	Chris Rigatti	121	

- 1. Device management tab
- 2. Users management tab
- 3. API management tab
- 4. Search/Filter bar

- 5. Click for user information.
- 6. Click for your integrator company's information.
- 7. General search
- 8. Sidebar tools appear here.

#### **DEVICES TAB**

# ACCESS TYPES:

- Company Administrator
- Device Manager

This page displays all LZR-SIGMA devices assigned to your Integrator account.

DEV	ICES USE	ERS EXTERNAL DATA	ACCESS (API)					Search	
3	status 🗸	DEVICE ID	COMPANY(SITE)		INST. ON	INST. BY	DATA PUS 🗸 H		21 DEVICES
1	$(\cdot)$	H6E7CB	Discourt Groceries (Store 54)	United States (Pittsburgh)	10 August 2020	Chris Algetti		^	Online     Online Ethernet
3		H6681A	BEA Inc. (BEA Occupe ncy Test)	United States (Pittsburgh)	11 June 2020	Тип Спаррета	+		• 📩 Offline Ethernet 🔅
		H785F1	BEA Inc. (BEA Occupa ney Test)	United States (Pittsburgh)	10 June 2020	Tim Chiappetta			1
	•	HAEC63	Dacoune Groceries (Store 27)	United States (Pittsburgh)	9 June 2020	Chris Rigetti	13		
	•	H7AA19	BEA Inc. (BEA US HQ)	United States (Pritsbu rgh)	5 May 2020	Tim Chiappetta		- 1	
	•	HC43AB	BEA Inc. (BEA US HQ).	United Scites (Phisto 1971	30 April 2020	Tim Chiappetta	BEAAnalyti cs		
		H038-18			12 February 202	Chiris Rigatti	12		

Status of all of your LZR-SIGMA devices

# **DEVICE INFORMATION**

# These sidebar tabs are used to customize device information. You may select one or more devices to be customized simultaneously.

- ACCESS TYPES:
- Company Administrator
- Device Manager

Sen	sorio						•	Logged in as Jo	hn Doe (SIGMA Analy	tics) Logout
DE	VICES US	ERS						Search		0,
10	status 🗸	DEVICE ID	COMPANY (SITE)	COUNTRY (CITY)	INST. ON	INST. BY	DATA PUS 🗸		DEFINE COMPANY	3
0		X0005E 2	54		860		(a.)		DEFINE SITE	
	•	X0005F			12.1		155			
0	•	X0005D	BEA Analytics (Pittsb urgh)	United States (Pittsbu rgh)	29/05/2018	Chris Rigatz	Thi		DEFINE UNIA PLON	
0	•	X00059	BEA Analysics (Headq uarters)	United States (Pittsbu rgh)	23/07/2018	jeff Boyd	Thi		PLACTWATE DEVICES	$\overline{0}$
1) 🛛		X00060	bea (bea )	United States (Pittsburgh)	21/03/2019	Mike Brazie r	CRI Test CS V		PARTIAL RESET	(8)
				2					EUPORT EXCIL FILE	9
				$\mathbf{O}$					1 SELECTED DEVICES	(10)
									Online     Offline	1 4

- 1. MODIFY MULTIPLE DEVICES: Selecting the device(s) will allow access to the sidebar tools, allowing you to modify several at once.
- 2. MODIFY A SINGLE DEVICE: Click on the device's ID to modify existing information (see page 10).

- 3. enduser information
- 4. installation location information
- 5. data push setup for transferring data via FTP or SFTP
- 6. erases device or multiple devices
- 7. clears the height, left/right limits, and all device location information
- 8. clears height and left/right limits
- 9. exports sensor data
- 10. status of selected devices

#### **DEVICE INFORMATION - Define Company**

Company = name of enduser's company or organization

- Company Administrator
- Device Manager



#### **DEVICE INFORMATION - Define Site**

- Company Administrator
- Device Manager



#### ACCESS TYPES:

#### Company Administrator

Device Manager

#### **DEVICE INFORMATION - Define Data Push Agent**

A data push agent is used to push data from SIGMA via FTP, SFTP, or HTTPs POST methods. The max frequency for a data push is 1 minute. SIGMA also supports two other data transfer methods, via REST API and Live Count mode.

ensorio		Select from a list of	Angest is at pass Oracle subject	ugud	
DEVICES	DEFINE DATA PUSH AGENT	existing data push age	nts		
i fanta 1	Bota puch againt pro-Dea		Add n	ew	
6 -		(1979)	1		
			Constant .		
•		Entrade	No.		
-		Seisene			00
2		DEVICE	DEF CREATE DATA PUSH A	GENT	
			ata Protocol	Second a contra SETP - COV	
			Data puth agent name	SHTP - JSON	· • •
			Ditter a value	HTTPS:	114
			Press a solution		
			FTF part		
			Bindary		
			Jean state		
			Press' a value		
			Personal Engene a vesture		
			Data frequency	Determination Receipt 1 Proceedings Determination	
			they consider	Kotty S. minutes Zaniy S. Jimment Rany W. Streamen	

#### **DEVICE INFORMATION - Individual Device**

# ACCESS TYPES:

Company Administrator

Device Manager

If an individual device was chosen from the "DEVICE ID" column (see page 6), the following screen will appear.



# **DEVICES TAB**

DEVICE INFORMATION Individual Device	ACCESS TYPES:
Device INFORMATION - Individual Device	Company Administrator     Device Manager
DEVICE H6E7CB Version P26 Last communication date: 30 September 2020 - 10:39	
MANAGE DEVICE LOCATION MANAGE DEVICE SET NETWORK SETTINGS SET COUNTING PROOF SAKE A SNAPSHOT MANAGE DEVICE Internal reference Control or value	Manage Device these screenshots show device settings for data push and live counting
1 Outs Push Agent	
<ul> <li>2 Uve Counting Agent</li> <li>3 Protocol &amp; format</li> <li>4 Uve counting name</li> <li>4 Uve counting name</li> <li>5 Articles 10</li> <li>4 Children_6*: 0, *Children_6*: 0</li> </ul>	CREATE DATA PUSH AGENT
Usersame	erner a rakar Brits FER Jonak Johan a rakar
Password	FIP part Crime a visiture
<ol> <li>Data Push Agent - by clicking the + button, the user can create a data push agent</li> <li>Live Counting Agent - used to send data from a sensor in near-real time, directly to a HTTP(s) endpoint URL. Note: Enabling live count mode for a sensor connected via cellular will increase monthly data charges. Contact your supplier for more information.</li> <li>Protocol &amp; format - see information pane</li> </ol>	Diversity Anton a citize Login Enter a citize Passed Enter a statue Data Inquency

- 4. Live counting name designate a title for your live counting
- 5. HTTP(S) URL the destination for your data
- 6. Username / Password specific to your data push agent, not the same as your Sensorio account credentials

. . . . . . . . . . . . .

#### **DEVICE INFORMATION - Individual Device**

#### ACCESS TYPES:

- Company Administrator
- Device Manager

The screenshot below shows device actions and device settings for network, counting proofs, and snapshots



#### ACCESS TYPES:

Company Administrator

• Device Manager (read-only)

This page displays all users associated with your Integrator account.

Those users with Device Manager access levels have "read-only" access to information in this tab and are, therefore, unable to add new users or modify existing users.

Sens	orio			Click	here to add new users. See next page.	Logged in as John Doe (SIGMA Analytics) Log
DEV	CES USERS					Sourch
0	COMPANY	ACCESS 🛩	NAME 🛩	EMAIL	V LAST LOGIN	~
0	SIGMA Analytics	Company Adminis trator	John Doe	sigma@beainc.com	07/13/2018	ADD USER
0	SIGMA Analytics	No access	Reid Harper	sigma1E@beainc.com	07/13/2018	15 USERS
0	SIGMA Analytics	Installer	Alicia Chamberlin	sigma1C@beainc.com	07/13/2018	Company 4 Administrator
0	BEA Install Co.	Company Adminis trator	Lauren Gaus	sigma2A@beainc.com	07/13/2018	Device Manager 2 Installer 3 Enduser 3
0	Retail Worldwide	Company Adminis trator	Mike Brazier	sigma3Atybeainc.com	07/13/2018	No access 3
0	BEA Install Co.	Device Manager	Mike Straub	sigma28@beainc.com	05/16/2018	6

# Total number of users and access permission levels

Company Administrator Device Manager Installer Enduser No access

#### USER INFORMATION

These sidebar tabs are used to customize user information. You may select one or more users to be customized simultaneously.

- ACCESS TYPES:
  - Company Administrator
  - Device Manager (read-only)

	Sen	sorio					Logged in as J	ohn Doe (SIGMA Analytics) Logout
	DEV	ICES USERS					Search	0,
	0	COMPANY	-	ACCESS 🗸 🗸	NAME ~	EMAIL	🗢 LAST LOGIN 🗢	
	Ó	SIGMA Analytics		Company Adminis trator	john Doe 2	sigma@beainc.com	07/13/2018	
1		SIGMA Analytics		No access	Reid Harper	sigma1E@beainc.com	07/13/2018	
Γ	D	SIGMA Analytics		installer	Alicia Chamberlin	sigma1C@beainc.com	07/13/2018	
1	0	BEA Install Co.		Company Adminis trator	Lauren Gaus	sigma2A0 bealnc.com	07/13/2018	2 SELECTED USERS
	0	Retail Worldwide		Company Adminis trator	Mike Brazier	signs3A@beainc.com	07/13/2018	Administrator No access 1
Ľ	0	BEA Install Co.		Device Manager	Mike Straub	sigma28@brainc.com	05/16/2018	
	0	SIGMA Analytics		Company Adminis trator	John Laslo	sigma1Ad/beainc.com	04/26/2018	

- 1. Selecting a user(s) will allow access to the sidebar tools.
- 2. Click on the user's name to modify existing information specific to that user.
- 3. Delete a user.
- 4. Change access level permission.
- 5. Add a new user (see pages 16 20).

# USER INFORMATION - Add User (User Type)

- Company Administrator
- Device Manager (read-only)

Sensorio			1000	I III ALI JOHN CONTRA	
DEWOS	ADD USER				
0	trail Provi sustan			There are three a	available User Types:
() 101	Restauree Fortex a satisfie			1. Integrator - Note: "Con	- your company npany" info will auto-populate.
0 504	<b>Lastname</b> Driver a valuer			2. Installer – 3 Note: "Con	aparty / partner installation company
1 ani	Prose Dever a salture :			list of previ	ously entered companies, or informatior
-O. Ann	Deertype Select a value	When type Seriest a value		3. Client – enc	luser
() 5444	Company	Installer Client		Note: "Con list of previ	npany" may be selected from a drop-dov ously entered companies, or informatior
C 500	SIGNA Analytics Access			must be ad	ded (see screenshots below).
(2): MA		There a			
0 10					
CREATE	EINSTALLER	Ch	U CR	EATE COMPANY	U C
Company o	ume 11 -		D/M 2 000	yang huma Mananakan	0/58
Address .	ite-		add:	ns. Ar Anator	
Central set	ne .		Cart	od same ar divellar	
Enall Draw of the	dar.		8/105 Deal	l standur	8,2108
Phone Enter a se	ha.		- <b>Par</b>	a sate	
		CILLUS (Dullingy)		Our De	uner -

USER INFORMATION - Add User (Access)

**CAUTION:** Be mindful in choosing access levels. Risks of varying degrees are associated with each level (see risk chart below descriptions). By assigning a user Company Administrator or Device Manager access permission, you are allowing that user to view, modify, or delete ALL devices, clients, and/or users associated with your integrator company.

- Company Administrator
- Device Manager (read-only)



,	ACCESS P	ERMISSION	ACCESS PERMISSION						
	RISK LEVE	ELS	Company Administrator	Device Manager	Installer	Enduser	No Access		
		Integrator	none	none	none	low	high		
	USER TYPE	Installer	high	high	none	none	none		
		Client	high	high	high	none	none		

#### USER INFORMATION - Add User (Email Confirmation)

Once a new user has been added, that user will receive an confirmation email.

#### ACCESS TYPES:

- Company Administrator
- Device Manager (read-only)



The new user must click on "Set password" to take them to the portal to create a password for their account.



After creating a password (a), the user will receive the following action depending on their access level permission:

- Those with Company Administrator or Device Manager level access permission will be taken to the home page.
- Those with Installer or Enduser level access permission will receive a prompt directing them to the app (below, left).
- Those with No Access will receive a prompt reminding them that they do not have access to the portal (below, right).

CREATE PASSWORD
No access

- Company Administrator
- Device Manager (read-only)

Sens	orio					See below for possible access types.	Logged in as	John Doe (SIGMA Analytics) Logout
DEVI	CES USERS						Search	9,
D	COMPANY	• •	ACCESS	w NAME w	EMAIL	UST U	ogin 🗸	
ŏ	SIGMA Analytics	1	Company Admin trator	is john Doe	sigma@beainc.com	07/13	/2018	CHANGE ACCESS
•	SIGMA Analytics	,	No access	Reid Harper	sigma1E@beainc.com	07/13	/2018	
O'	SIGMA Analytics		installer	Alicia Chamberlin	sigma1C@beainc.com	07/13	/2018	ADD 125ER
0	BEA Install Co.	1	Company Admin trator	iš Lauren Gaus	sigma2443 bealnc.com	07/13	/2018	2 SELECTED USERS
0	Retail Worldwide	1	Company Admin	is Mike Brazier	sigma3A@beainc.com	07/13	/2018	Company 1 Administrator No access 1
0	8EA Install Co.		CHANG	ACCESS				
Ö	SIGMA Analytics		co rra	COMPANY ADMINISTRATOR				
			ക്	DEVICE MANAGER Uter has foll mobile apprane online p	ortal access excluding user managemen			
				INSTALLER				
			O	ENDUSER				
			0	NO ACCESS Utier has no access to mobile app or o	nine portal			This example shows a chan in access level permission fr Device Manager to No Acce
inal Ins	structions				CONFIRM			

#### **USER INFORMATION - Delete User**

- Company Administrator
- Device Manager (read-only)





### EXTERNAL DATA ACCESS (API) TAB

# ACCESS TYPES:

- Company Administrator
- Device Manager

Sen	sorio								Logge	ogged in as Chris Rigatti (BEA Inc.) Logout	
DE	VICES	EXTERNAL DATA ACCESS (API)							Q.		
0	PRERX	~	NAME	*	CREATION DATE	~	EXPOSED FEATURES	← companies	~		
9	CómPŋ	p	BEATestKey		9 june 2020		Get data, Get device detail, Get devices	BEA MC.		ADD A KEY	
	bÖYnw	Fe1	GCKey		30 April 2020		Get data, Get device detail. Get devices	Grove City Premium Outlet	6	DELLITE KEY	
							6			DOCUMENTATION 3	

1. Add a Key

Create a new API key. Each key can be configured to receive data for one or more companies managed by your integrator account.

- 2. <u>Delete Key</u> Remove a previously assigned key
- 3. <u>Documentation</u> Information for API request and response formats