

MAIN MENU

QUICK START menu

TEACH IN settings
 Install Walk Presence
 Install Right Walk Motion
 Install Left Walk All
 Pull Cord Background
 Walk Safety

> More menu
 ServiceMode
 FactoryReset
 Heating

Service Mode settings
 ON
 OFF

Factory Reset settings
 Partial
 Full

Heating settings
 AUTO
 ECO
 OFF

IN-OUT menu

Out1 Func settings
 Mot Pull Pres
 Mot Pull Safe
 Mot+ & Height
 Mot+ & Speed
 Pull Cord
Safety
 Presence
 PresSafe
 Mot Pull
 Not Used

Out2 Func settings
 Mot Pull Pres
 Mot Pull Safe
 Mot+ & Height
 Pres & Height
 Pull Cord
 Safety
Presence
 PresSafe
 Mot Pull
 Not Used

Relay Func settings
 Mot Pull Pres
 Mot Pull Safe
 Mot+ & Height
 Mot+ & Speed
 Pull Cord
 Safety
 Presence
 Motion
Mot Pull
 Not Used

> More menu
 Out1 Logic
 Out1 Holdtime
 Out1 Test
 Out2 Logic
 Out2 Holdtime
 Out2 Test
 Relay Logic
 Relay Holdtime
 Relay Test

Out1 Logic settings
 NC NO

Out1 Holdtime settings
 counting 10 s
 10 min 5 s
 5 min 3 s
 1 min 1 s
 30 s 100 ms

Out1 Test settings
 ON OFF

Out2 Logic settings
 NC NO

Out2 Holdtime settings
 counting 10 s
 10 min 5 s
 5 min 3 s
 1 min 1 s
 30 s 100 ms

Out2 Test settings
 ON OFF

Relay Logic settings
 Active
 Passive

Relay Holdtime settings
 counting 10 s
 10 min 5 s
 5 min 3 s
 1 min 1 s
 30 s 100 ms

Relay Test settings
 ON OFF

MOTION menu

Field Width settings
 0 – 999 [240.1]

Field Stop settings
 0 – 999 [287.4]

Object Type settings
 Any
 Vehicle
 VehicleXL

> More menu
 Immunity
 Field Start
 Direction

Immunity settings
 1 4
 2 5
 3

Field Start settings
 0 – 999 [0.0]

Direction settings
 Uni
 Uni 100%+
 Uni rev
Uni 100%
 Any

PRESENCE menu

Field Width settings
 0 – 999 [240.1]

Field Stop settings
 0 – 999 [78.7]

Object Type settings
 Any
 Vehicle
 VehicleXL

> More menu
 Immunity
 Field Start
 PresTime

Immunity settings
 1 4
 2 5
 3

Field Start settings
 0 – 999 [0.0]

PresTime settings
 Infinite
 120 min
 60 min
 30 min
 10 min
 5 min
 2 min
 1 min
 30 s

SAFETY menu

Field Width settings
 0 – 999 [240.1]

Field Stop settings
 0 – 999 [15.7]

> More menu
 Immunity
 PresTime
 UncovZone

Immunity settings
 1 4
 2 5
 3

PresTime settings
 Infinite
 120 min
 60 min
 30 min
 10 min
 5 min
 2 min
 1 min
 30 s

UncovZone settings
 49.2 9.8"
 39.4 5.9"
 29.5 3.9"
 19.7 2"
 13.8

OTHERS menu

ObjectType+ settings
 Any
 Vehicle
 VehicleXL
 VehicleDWH

PullMinTime settings
 0 4 8
 1 5 9
 2 6
 3 7

PullObjType settings
 Any
 Pedestrian
 Vehicle Depth
 VehicleXL
 Vehicle

HeightMin settings
 157.5" 98.4"
 137.3" 88.6"
 127.9" 78.7"
 118.1" 68.9"
 108.3"

SpeedMax settings
 31 mph 15.5 mph
 28 mph 12.4 mph
 24.8 mph 9.3 mph
 21.7 mph 6.2 mph
 18.6 mph 3.1 mph

> DIAGNOSTIC menu

FieldDisplay

QR-code

ID #

Event Log

ResetLog
 Yes No

Power Supply

Sensor Temp

Operating Time

RC password

BT password

Language
 English Deutsch French

Display units
 Inch Meter

> Specific menu
 IntegObjMode LateralAngle
 DistFilter menu ForceLateral menu
 MinObjHeight menu MountHeight
 TiltAngle ForceHeight menu
 ForceTilt menu

IntegObjMode settings
 Standard Infinite

DistFilter settings
 Both TimeBased

MinObjHeight settings
 49.2" 19.7" 5.9"
 39.4" 13.8 3.9"
 29.5" 9.8" 2"

ForceTilt/ForceLateral/ForceHeight settings
 Manual Auto

> Admin menu

Config PN

SoftPiN

LZR®-WIDESCAN MENU TREE

Config: 42.4443.06
 Software: V4.5

