



- 2) SET FUNCTION SWITCH TO "E" PREFERED IF AVAILABLE, OR FUNCTIONS 1-2.
- 3) BEAMS OR SWING SIDE SUPERSCAN MUST BE USED TO ENSURE COMPLIANCE TO ANSI 156.10

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com

## TITLE: DOROMATIC ASTRO-SWING WITH BODYGUARD, INTERFACE CHIP

SIZE:	DRAWN BY: KJG	REV BY: JDC	PART NO: 80.0072.04
A	SCALE:	DATE:	SHEET
	NONE	20 MARCH 2006	1 OF 1

