



NOTES: 1 ) DO NOT POWER ALL SENSORS FROM MASTER CONTROL BOX. POWER SOME OF THE SENSORS OFF OF THE SLAVE CONTROL.

- 2 ) ON BOTH CONTROLS SET PMD FUNCTIONS F20 = a, F19 = b, F18 = 00, F17=00, F16 = 05, F14 = a, F13 = a, F11 = 65 DEGREES.
- 3) ON THE MASTER CONTROL SET FUNCTION F12 TO 3 DEGREES LESS THAN F10.
- 4) THE WIRING OF THE SUPERSCANS IS USING THE QUICK DISCONNECT CABLES WITH PREWIRED ON SAFETY SIDE.
- 5) CONFIRM ALL SYNC LINES. ADDING SYNC LINES MAY BE REQUIRED. 6) DIPSWITCHES 1 THRU 5 LOCKOUT TIME. 6 OFF, 7 OFF, 8 ON.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564, DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 (412) 249-4101 EMAIL: www.beasensors.com

## TITLE: BESAM MP VER. 6.3,4 DUAL WITH LO21B/U PASSPORT PLUS / PARALLAX 2, Q-DISCONNECT ON APPROACH SIDE

SIZE:	DRAWN BY: KJG	REV BY: TUC	PART NO: 80.0165.07
	SCALE:	DATE:	SHEET
	NONE	30 NOV 05	1 OF 1