

NOTES: 1) SET "B" SWITCH TO NORMALLY OPEN PIN AND IT NEEDS TO CLOSE AT APPROX. 65-70 DEGREES..

2) INSTALL A JUMPER INTO PINS 17, 18 ON THE CONTROL BOX.

3) DOOR POSITION SWITCH MUST ENGAGE 10 DEGREES FROM DOOR CLOSING

4) BE SURE TO COMPLY WITH ANSI A156.19

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM

EMAIL: www.beasensors.com

TITLE: BESAM 405 LOW ENERGY OPERATOR ETIK 1 CONTROL WITH LE-21, APPROACH/ SAFETY SIDE SUPERSCANS

-	ZE:	DRAWN BY: TUC	REV BY: TUC	PART NO: 80.0201.01
.	Α	SCALE:	DATE:	SHEET
		NONE	18 NOV 2005	1 OF 1

