

NOTES: 1) ADDITIONALLY, PERFORM ALL WIRING AT MICROCELL CONTROL BOX PER THE RESPECTIVE USERS GUIDE.

2) ON THE MASTER CONTROL SET PMD FUNCTIONS F13 & F14 TO a, F16=05, F17=00, F18=00, F19 = b, F20=a, F12 TO 3 DEGREES LESS THAN F10.

3) ON THE SLAVE CONTROL SET PMD FUNCTION F13 & F14=a, F17=00, F18=00, F19 = b, F20 = a

4) LO21B DIPSWITCH SETTINGS #1-5 LOCKOUT TIMING, #6 UP/ OFF, #7 UP/ OFF, #8 DOWN/ ON.

5) CONFIRM ALL SYNC LINES ARE PRESENT. ADDING SYNC LINES MAY BE REQUIRED.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE
PITTSBURGH, PA 15275
PHONE: (412) 249-4100
FAX: (412) 249-4101
FMAIL: www.beasensors.com

TITLE: BESAM MP CONTROL VER.6.3 DUAL WITH PASSPORT and MICROCELL SAFETY BEAM

	SIZE:	DRAWN BY: TUC	REV BY: TUC	PART NO: 80.0202.01
	В	SCALE:	DATE:	SHEET
		NONE	18 NOV 2005	1 OF 1