

NOTES: 1) THE BODYGUARD RELAY OUTPUT FUNCTION MUST BE CHANGED TO #2.

2) SHOWN LH,RH MAGIC SWING AND RH MAGIC FORCE FOR LH MAGIC FORCE REVERSE RED AND BLACK WIRES.

3) DOOR CONTROL SW2 SWITCH BANK SET DIPSWITCH #1 & 3 TO THE ON POSITION.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM

TITLE: STANLEY MP CONTROL WITH LO-21P, BODYGUARD, EAGLE

	SIZE:	DRAWN BY: TUC	REV BY: TUC	PART NO: 80.0212.01
l	Α	SCALE:	DATE:	SHEET
		NONE	18 OCT 2005	1 OF 1

