


MASTER M-1

1	APPROACH SENSOR - POWER/SIGNAL - +24V
2	APPROACH SENSOR - SIGNAL
3	APPROACH SENSOR - POWER - 0V
4	GUIDE RAIL BEAM - POWER/SIGNAL + 24V
5	GUIDE RAIL BEAM - SIGNAL
6	GUIDE RAIL BEAM - POWER - 0V
7	REMOTE SWITCH - SIGNAL
8	HEADER MOUNTED SWING SIDE SAFETY - SIGNAL
9	BODYGUARD DAT LINE - DATA +
10	DOOR MOUNTED SWING SIDE SAFETY - SIGNAL
11	DOOR MOUNTED SENSORS - POWER/SIGNAL - +24V
12	DOOR MOUNTED APPROACH SIDE RECYCLE - SIGNAL
13	DOOR MOUNTED SENSOR - POWER - 0V

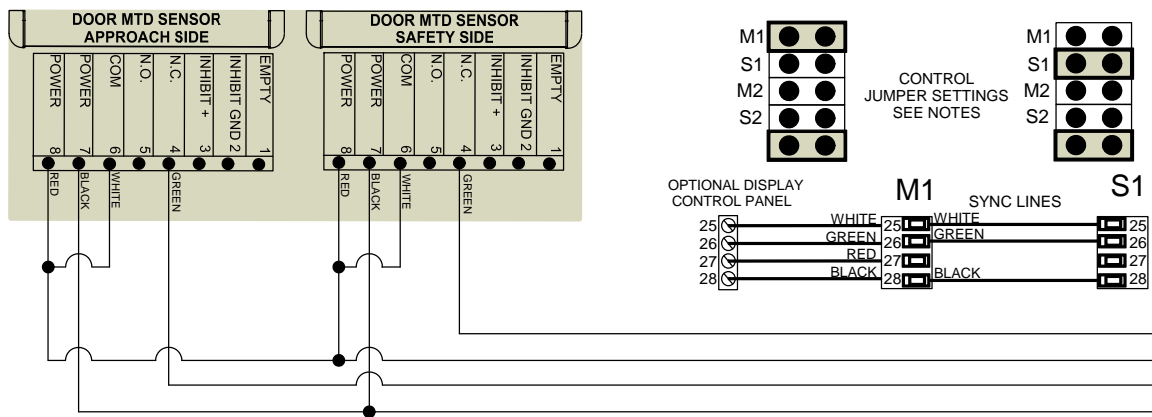

SLAVE S-1

1	APPROACH SENSOR - POWER/SIGNAL - +24V
2	APPROACH SENSOR - SIGNAL
3	APPROACH SENSOR - POWER - 0V
4	GUIDE RAIL BEAM - POWER/SIGNAL + 24V
5	GUIDE RAIL BEAM - SIGNAL
6	GUIDE RAIL BEAM - POWER - 0V
7	REMOTE SWITCH - SIGNAL
8	HEADER MOUNTED SWING SIDE SAFETY - SIGNAL
9	BODYGUARD DAT LINE - DATA +
10	DOOR MOUNTED SWING SIDE SAFETY - SIGNAL
11	DOOR MOUNTED SENSORS - POWER/SIGNAL - +24V
12	DOOR MOUNTED APPROACH SIDE RECYCLE - SIGNAL
13	DOOR MOUNTED SENSOR - POWER - 0V

NOTES:

1) SET BODYGUARD TO RECORD MODE


WHEN INSTALLING THIS SYSTEM ON A PAIR OR DOUBLE EGREES ENSURE TO SET THE SLAVE 1 S1 JUMPER AND MASTER 1 M1 JUMPER CORRECTLY.

ALL COMMON ACTUATING AND SAFETY SENSORS AND SWITCHES, PUSHPLATES APPROACH SENSOR, SWING AREA SAFETY SENSORS (BODYGUARD) SHOULD BE CONNECTED TO THE MASTER CONTROL. DOOR MOUNTED SENSORS (SUPERSkans) SHOULD BE CONNECTED TO THE OPERATOR POWERING THE DOOR THE SENSORS ARE ON

ENSURE CORRECT CONNECTION POINTS FOR NECESSARY SYNC LINES AND OPTIONAL DISPLAY CONTROL PANEL.

FOR DUAL EGRESS PARALLEL ALL CONNECTIONS FOR SECOND BODY GUARD TO MASTER CONTROL

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM



BEA
OPEN UP NEW HORIZONS
HALMA GROUP COMPANY

100 ENTERPRISE DRIVE
PITTSBURGH, PA 15275
PHONE: (412) 249-4100
FAX: (412) 249-4101
EMAIL: www.beasensors.com

TITLE:
RECORD 8000 SERIES SWING DOOR OPERATOR PARALLAX II SYSTEM

SIZE:	DRAWN BY:	REV BY:	PART NO:
A	WJR	WJR	80.0293.01
	SCALE:	DATE:	SHEET
	NONE	JAN. 07 2011	1 OF 1