

NOTES:

- 1) THIS WIRING DIAGRAM IS FOR FUNCTIONALITY ONLY. ANSI 156.19 DOESN'T APPLY DUE TO ACTIVATION VIA THE EAGLE. ADDITIONAL SAFETY SENSOR(S) (SUCH AS THE BODYGUARD WITH SWING SIDE SUPERSCANS, & SECONDARY RE-ACTIVATION SENSORS) ARE REQUIRED PER ANSI 156.10.
- 2) MC25 JUMPERS JP1 & JP2 ARE PLACED ON PINS 1,2 AND 4,5 FOR DRY CONTACTS.
- 3) CAP OFF UNUSED WIRES. (BLACK & GREEN)

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-249-7937 OR1-866-836-1863/MID-WEST: 1-800-407-4545 OR 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM



B.E.A., Inc.

100 Enterprise Drive Pittsburgh, PA 15275 PH: (412) 249-4100 FAX: (412) 249-4101

TITLE: MC-25, MAGLOCK, LOCKNETICS 505 POWER SUPPLY, RECEIVER

SIZE:	CAGE CODE	: DWG NO:	FILE OF:	DRAWN BY:	REV:
Α		80.0294.00	ENG'G	JED	00
SCALE: NTS DA		DATE: 24 MA	RCH, 2008	SHEET: 1	OF 1