



SEE NOTE 1

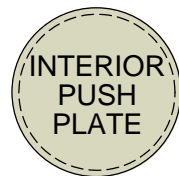

**NOTES:**

- 1) Set output option switches to DC & Wet.  
Remove power before changing.
- 2) Be sure to set the 12/24 volt jumpers properly for the power being use.

INTERIOR PUSH PLATE AND/OR EXTERIOR CARD READER WHEN ACTIVATED SHALL RELEASE MAGLOCK AND ALLOW USER TO OPEN DOOR. THE FLY IS ENABLED AFTER THE PUSH PLATE AND/OR CARD READER ACTIVATES THE MCLINX AND WILL REMAIN ENABLED UNTIL THE DOOR CLOSES.

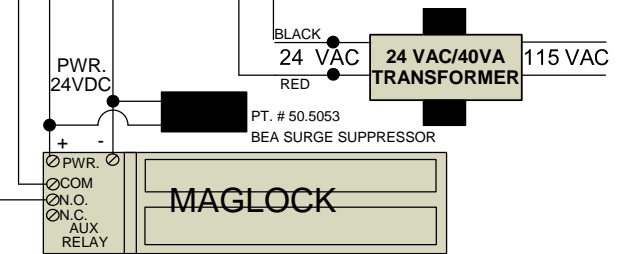

SEE NOTE 2

		100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com	
<b>TITLE:</b> Access Control, Maglock, Card Reader, MCLinx1, Fly			
SIZE: A	DRAWN BY: WJR	REV BY:	PART NO: 80.0302.00
	SCALE: NONE	DATE: DEC 11 2008	SHEET 1 OF 1