

**NOTES:** 1) SET "SENSOR TYPE" JUMPERS ON CSDB BOARD FOR O.P.D. AND N.C. THEN SET BODYGUARD OUTPUT CONFIGURATION TO "2".

2) LEAVE JUMPERS ON SUPERSCANS AT FACTORY DEFAULTS

3) BLANKING / INHIBIT INPUTS ARE PROVIDED ON THE CSDB BOARD FOR INHIBITING THE SWING SIDE SUPERSCANS DURING THE OPENING IF THE ARE SEEING A WALL OR RAIL. SEE BESAM POWERSWING CSDB INSTALLATION MANUAL FOR DETAILS.

4) ENSURE THAT DIP SWITCH 7 ON CSDB BOARDS IS SET CORRECTLY FOR MASTER OR SLAVE ON THE RESPECTIVE CONTROLS

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com

## TITLE: BESAM POWERSWING CSDB/EXB D.E. PAIR WITH PARALLAX II

SIZE:	DRAWN BY: WJR	REV BY: EOF	PART NO: 80.0307.00
Α	SCALE:	DATE:	SHEET
	NONE	AUG. 24 2008	1 OF 1

