

## NOTES:

- 1. THE THREE INPUTS TO THE R2E-100 MUST BE USED AS A "DRY INPUT" WITH NO VOLTAGE APPLIED FROM THE CARD READER, REX, OR DPS.
- 2. THE R2E-100, AND DEVICES CONNECTED DIRECTLY TO IT MUST BE MOUNTED INSIDE THE PROTECTED AREA TO BE UL294/ULC-S319 COMPLIANT.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com

## TITLE:

R2E-100 DOOR HANDLE SENSOR TIMER MODE (DIP2 IS OFF)

SIZE:	DRAWN BY: WJR	REV BY: WJR	PART NO: 80.0314.01
Α	SCALE:	DATE:	SHEET
	NONE	29 OCT. 2010	1 OF 1

