



WIRE COLOR	DESIGNATION	FUNCTION	CONNECTIONS
RED	PWR.	INPUT 12-24V AC-DC	ANY POWER SOURCE
BLACK	PWR.		
WHITE	COM.	OUTPUT APPROACH SIDE R-2/GREEN LED	CONNECT TO ACTIVATION INPUT OF DOOR CTRL
GREEN	N.O.		
YELLOW	N.C.		
WHITE/BLACK	COM.	OUTPUT SAFETY SIDE R-1/RED LED	CONNECT TO SAFETY INPUT OF DOOR CTRL
GREEN/WHITE	N.O.		
YELLOW/BLACK	N.C.		
BLUE	MONITOR	INPUT	MONITORING OUTPUT OF DOOR CTRL.
BROWN	MONITOR		

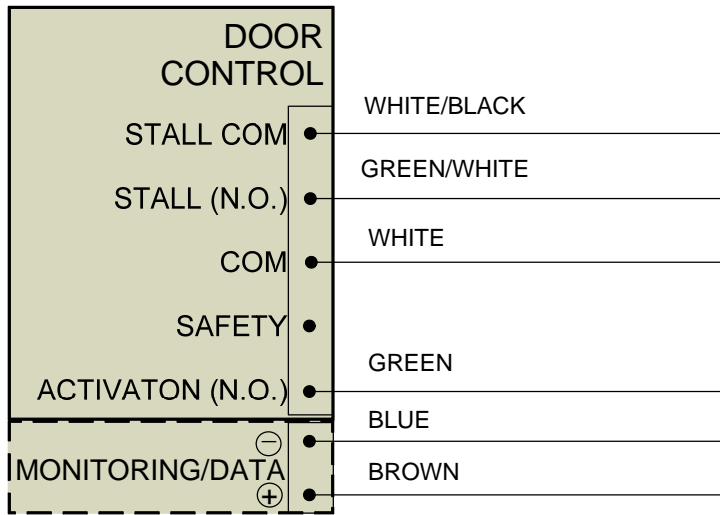

IF NOT USING MONITORING DO NOT CONNECT THE BLUE AND BROWN WIRES AND CAP OFF.

- NOTES:**
- 1) MODULE CONNECTED TO POWER / DOOR CONTROL BECOMES THE MASTER MODULE ALL OTHERS WILL BE SLAVE MODULES
  - 2) MODULES ON SAFETY SIDE MUST HAVE DIP SW. 1 ON. THEY WILL USE RELAY 1 AND WILL HAVE A RED LED WHEN IN DETECTION.
  - 3) MODULES ON APPROACH SIDE MUST HAVE DIP SW. 1 OFF. THEY WILL USE RELAY 2 AND WILL HAVE A GREEN LED WHEN IN DETECTION.
  - 4) MASTER/SLAVE - MASTER/SLAVE CABLES CAN BE PLUGGED INTO EITHER END OF THE MODULES. MASTER DOES NOT HAVE TO BE AT THE END OF THE CHAIN AND COULD HAVE A SLAVE MODULE ON BOTH SIDES OF IT.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE  
PITTSBURGH, PA 15275  
PHONE: (412) 249-4100  
FAX: (412) 249-4101  
EMAIL: www.beasensors.com

---

**TITLE:** QUAD SCAN GENERIC DOOR CONTROL

SIZE:	DRAWN BY:	REV BY:	PART NO:
A	WJR		<b>80.0338</b>
	SCALE:	DATE:	SHEET
	NONE	17 JAN. 2011	1 OF 1