


NOTES:

- 1) FOR KNOWING ACT INSTALLATIONS SET "FA" TO "01". AUX INPUT WILL BE PRIMARY ACTIVATION AND QUADSCANS AND/OR EAGLES BECOME SECONDARY ACTIVATION
- 2) SECOND BODYGUARD AND EAGLE ARE USED PRIMARILY ON DUAL EGRESS APPLICATIONS. USE OPTIONAL DAUL EGRESS HARNESS PT# US02-0583-09.
- 3) FOR PAIRS ENSURE THAT THE SYNC. CABLE IS CONNECTED BETWEEN THE CONTROLS.
- 4) ENSURE THAT "FL" IS SET TO "01" (NEW DATA) ON THE CUHub-R AND "F1" IS SET TO "1" (NEW DATA) ON THE BODYGUARD.
- 5) A) MODULE CONNECTED TO CUHub-R BECOMES THE MASTER MODULE ALL OTHERS WILL BE SLAVE MODULES
 B) MODULES ON SAFETY SIDE MUST HAVE DIP SW. 1 ON. THEY WILL USE RELAY 1 AND WILL HAVE A RED LED WHEN IN DETECTION.
 C) MODULES ON APPROACH SIDE MUST HAVE DIP SW. 1 OFF. THEY WILL USE RELAY 2 AND WILL HAVE A GREEN LED WHEN IN DETECTION.
 D) MASTER/SLAVE - SLAVE/SLAVE CABLES CAN BE PLUGGED INTO EITHER END OF THE MODULES. MASTER DOES NOT HAVE TO BE AT THE END OF THE CHAIN AND COULD HAVE A SLAVE MODULE ON BOTH SIDES OF IT.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM

		100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com	
<p>TITLE: BESAM SM 900 (CU-2) CUHubR WITH EAGLE, BODYGUARD AND QUADSCANS</p>			
SIZE: A	DRAWN BY: WJR	REV BY:	PART NO: 80.0339
SCALE: NONE	DATE: 18 JAN. 2011	SHEET 1 OF 1	