



NOTES:


1) SET BR3 TO FUNCTION 35. SET HOLD TIMES AND DELAYS AS REQUIRED. SEE BR3 USERS GUIDE FOR PROGRAMMING INSTRUCTIONS.

EXAMPLE SETTINGS FOR A NON-SIM PAIR.

- H1=2
- H2=1
- H3=1
- D1=_1
- D2=1

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM

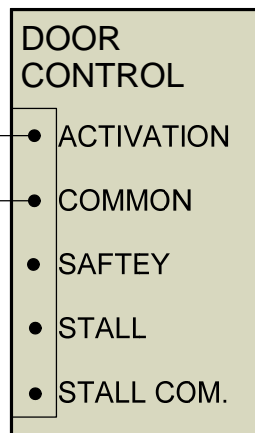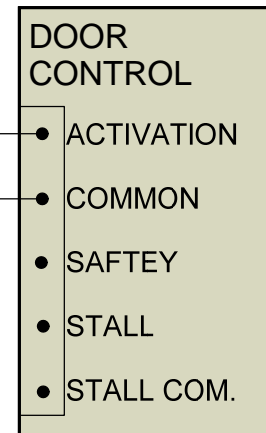

		100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com	
<p>TITLE: BR3 Fn35- NONSIM PAIR, ELECTRIC STRIKE SUPERSCANS INHIBITED WHEN CLOSED</p>			
SIZE: A	DRAWN BY: WJR	REV BY:	PART NO: 80.0341.00
SCALE: NONE	DATE: FEB. 23 2011	SHEET 1 OF 1	