

NOTES: NOTE 1) WHEN PROGRAMMING THE KEYPAD YOU WILL DESIGNATE WHICH OUTPUT WILL BE USED BY EACH CODE.

> CODE #1 - OUTPUT 1 MAIN RELAY, WILL RELEASE LOCK AND ACTIVATE DOOR. CODE #2 - OUTPUT 2, WET OUTPUT, WILL ONLY RELEASE LOCK. OUTPUT VOLTAGE WILL BE THE SAME AS SUPPLY VOLTAGE. IF SUPPLY VOLTAGE IS VAC, THE KEYPAD WILL RECTIFIED IT TO VDC.

NOTE 2) SEE BR3 USERS GUIDE FOR PROGRAMMING TO FUNCTION "65", SETTING HOLD TIMES AND DELAYS AND SETTING JUMPERS SO RELAY ONE IS A WET DC OUTPUT FROM BR3.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL BEA TECHNICAL SERVICE AT 800-523-2462. DO NOT LEAVE ANY PROBLEM UNRESOLVED, IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL BEA, LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101

EMAIL: www.beasensors.com

TITLE: BR-3 WITH KEYPAD AND **MULTIPLE FUNCTIONS**

DRAWN BY: WJR	REV BY:	PART NO: 80.0351.00
SCALE:	DATE:	SHEET
NONE	15 FEB 2013	1 OF 1

