



NOTES: 1) Leave BR3 jumpers at default (dry) settings  
 2) Leave d1 delay at 00. Set d2 delay to \_2 (.5 sec).  
 Set H1 and H2 for lock hold times and H3 for door control hold open time.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-249-7937 OR 1-866-836-1863/ MID-WEST: 1-800-407-4545 OR 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASSENSORS.COM

100 ENTERPRISE DRIVE  
 PITTSBURGH, PA 15275  
 PHONE: (412) 249-4100  
 FAX: (412) 249-4101  
 EMAIL: www.beasensors.com

**TITLE: Br-3 TWO AUTOMATIC DOORS INTERLOCKED W/MAGLOCKS AND ELECTRIC STRIKE**

SIZE:	DRAWN BY: WJR	REV BY:	PART NO: 80.0377.00
A	SCALE: NONE	DATE: 2015, APRIL 28	SHEET 1 OF 1