



- NOTES: 1) HOLD ADJUSTMENT MAY NEED TO BE INCREASED FOR PROPER OPERATION OF LOCKOUT.
 2) SET "B" SWITCH TO NORMALLY OPEN PIN. CLOSE CONTACT AT 65 DEGREES.
 3) CONNECTION FOR RH OPERATOR SHOWN. REVERSE RED AND BLACK ON LH OPERATOR.
 4) INSTALL JUMPER AT TERMINALS 17 AND 18 OF BESAM CONTROL

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE
 PITTSBURGH, PA 15275
 PHONE: (412) 249-4100
 FAX: (412) 249-4101
 EMAIL: www.beasensors.com

TITLE: BESAM 300/400 ETIK CONTROL WITH PARALLAX 1 SYSTEM

SIZE: A	DRAWN BY: KJG	REV BY: KJG	PART NO: 80.0066.05
	SCALE: NONE	DATE: 16 JUL 2005	SHEET 1 OF 1