



**NABCO
U-19 CONTROL
MICROPROCESSOR**

NOTES: 1) SET AUX OUTPUT TO #0 SWING, #3 FOLD ON HANDI-TERMINAL.
 2) TO TEST IF UNIT IS WIRED CORRECTLY, MEASURE THE VOLTAGE ACROSS TERMINAL 6 & 7 ON BODYGUARD OR AT THE BLUE & BROWN WIRE FROM THE BODYGUARD 10 JST CONNECTOR. VOLTAGE SHOULD READ 12 VDC IN THE DOOR OPEN POSITION.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE
 PITTSBURGH, PA 15275
 PHONE: (412) 249-4100
 FAX: (412) 249-4101
 EMAIL: www.beasensors.com

**TITLE: NABCO U-19 CONTROL WITH
BODYGUARD**

SIZE: A	DRAWN BY: KJG	REV BY: TUC	PART NO: 80.0082.04
	SCALE: NONE	DATE: 08 NOV 2005	SHEET 1 OF 1