
 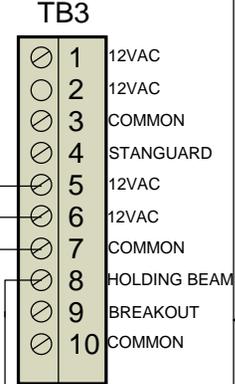



SEE NOTE 1

**STANLEY
MC521 CONTROL**

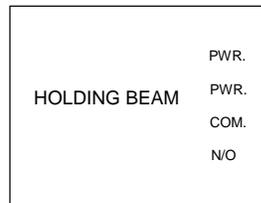

- NOTES: 1) WIZARDS WILL OPERATE WITH THE 12 VAC ON TB-4 TERMINALS 1&2, 5&6.
 2) BROWN AND BLUE PRESENCE INPUTS ARE POLARITY SENSITIVE. POLARITY MUST BE RESPECTED
 3) FOR ADDITIONAL WIRING AND INSTRUCTIONS REFER TO STANLEY MC521 MANUAL #204003.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM

		100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com	
TITLE: STANLEY DURAGLIDE MC521 CONTROL W/ WIZARD II SYSTEM			
SIZE: A	DRAWN BY: WJR	REV BY:	PART NO: 80.0299.00
	SCALE: NONE	DATE: 01 OCT 2008	SHEET 1 OF 1