



- NOTES:**
- 1.) INHIBIT MASTER MODULE SHOULD ALWAYS BE CLOSEST TO HINGE SIDE AND STALL SLAVE SHOULD ALWAYS BE CLOSEST TO THE LEADING EDGE OF THE DOOR.
  - 2.) ADJUST THE INHIBIT MASTER MODULE OUT SLIGHTLY FURTHER THAN THE STALL MASTER AND STALL SLAVE MODULES SO IT SEES THE WALL OR RAIL FIRST AND INHIBITS THE STALL SIGNAL.
  - 3.) THIS DIAGRAM IS PART OF THE BEA PARALLAX SYSTEM AND IS EXCLUSIVELY USED TO FACILITATE ALTERNATIVE SWING SIDE SUPERSCAN INHIBITING. FOR ADDITIONAL INFORMATION SEE THE APPROPRIATE BEA WIRING DIAGRAM FOR YOUR TYPE OF AUTOMATIC DOOR OPERATOR/CONTROL AND VERSION OF LO21. ENSURE COMPLIANCE WITH ANSI 156.10.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-249-7937 OR 1-866-836-1863/ MID-WEST: 1-800-407-4545 OR 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE  
 PITTSBURGH, PA 15275  
 PHONE: (412) 249-4100  
 FAX: (412) 249-4101  
 EMAIL: www.beasensors.com

**TITLE:** SUPER SCAN, SECOND MASTER MODULE FOR INHIBIT

SIZE:	DRAWN BY:	REV BY:	PART NO:
A	WJR		80.0304.00
	SCALE:	DATE:	SHEET
	NONE	16 JUNE 2009	1 OF 1