



NOTES:

- 1) IF YOUR CONTROL HAS ONLY ONE INPUT FOR STALL YOU MAY SIMPLY PARALLEL THE STALL COMMONS AND STALL 1 AND STALL 2 TO THIS SINGLE INPUT. IF YOU HAVE DUAL CONTROLS SIMPLY ROUTE STALL 1 AND COMMON TO ONE CONTROL AND STALL 2 AND COMMON TO THE OTHER CONTROL. SYNC WIRE MAY BE REQUIRED.
- 2) PARALLINK RED LED SHOULD BE ON DURING THE DOOR OPENING CYCLE.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM



100 ENTERPRISE DRIVE
PITTSBURGH, PA 15275
PHONE: (412) 249-4100
FAX: (412) 249-4101
EMAIL: www.beasensors.com

TITLE: PARALLINK, GENERAL INSTALLATION

SIZE: A	DRAWN BY: WJR	REV BY:	PART NO: 80.0334.00
	SCALE: NONE	DATE: 07 SEPT. 2010	SHEET 1 OF 1