



- NOTES:**
- 1) SET EACH HUB FOR A SINGLE DOOR.
 - 2) DOOR CONTROL "A" HARNESS FROM EACH HUB WILL GO TO IT'S RESPECTIVE CONTROL. DOOR CONTROL "B" HARNESS FROM EACH HUB WILL GO TO THE OPPOSITE CONTROL. IN THIS CONFIGURATION DOORS WILL STALL INDEPENDANTLY.
 - 3) SEE LZR MICROSCAN USERS GUIDE FOR COMPLETE INSTALLATION INSTRUCTIONS.
- TYPICAL WIRING
- | | | |
|-------------------|-------------------------|---------------------|
| WHITE- COMMON | WHITE/RED- STALL COMMON | WHITE/BLACK- COMMON |
| GREEN- ACTIVATION | GREEN/RED- STALL | GREEN/BLACK- SAFETY |

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM

100 ENTERPRISE DRIVE
 PITTSBURGH, PA 15275
 PHONE: (412) 249-4100
 FAX: (412) 249-4101
 EMAIL: www.beasensors.com

TITLE:
 LZR MICROSCANS ON DUAL EGRESS
 REVERSE APPLICATIONS

SIZE:	DRAWN BY:	REV BY:	PART NO:
A	WJR	WJR	80.0359.03
	SCALE:	DATE:	SHEET
	NONE	07242019	1 OF 1