


12/24 VAC/VDC

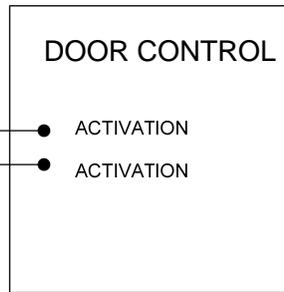

NOTES:

- 1) SET BR-3 TO FUNCTION "25".
- 2) SET TIMERS AS FOLLOWS.
 H1 = 01
 H2 = 01
 D1 = PRESENCE TIME REQUIRED BEFORE ACTIVATION OCCURS..
- 3) IF PRESENCE DETECTION IS LOST BEFORE d1 TIME EXPIRES, DOOR WILL NOT ACTIVATE.

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM

	100 ENTERPRISE DRIVE PITTSBURGH, PA 15275 PHONE: (412) 249-4100 FAX: (412) 249-4101 EMAIL: www.beasensors.com		
	TITLE: PRESENCE TIMER TO DELAY ACTIVATION		
SIZE: A	DRAWN BY: WJR	REV BY:	PART NO: 80.0364.00
SCALE: NONE	DATE: 09082014	SHEET 1 OF 1	