



Upon completion of the installation or service work, at a minimum, perform a daily safety check in accordance with the minimum inspection guidelines provided by AAADM. Provide each equipment owner with an owner's manual that includes a daily safety checklist and contains, at a minimum, the information recommended by AAADM. Offer an information session with the equipment owner explaining how to perform daily inspections and point out the location of power/operation switches to disable the equipment if a compliance issue is noted. The equipment should be inspected annually in accordance with the minimum inspection guidelines. A safety check that includes, at a minimum, the items listed on the safety information label must be performed during each service call. If you are not an AAADM certified inspector, BEA strongly recommends you have an AAADM certified inspector perform an AAADM inspection and place a valid inspection sticker below the safety information label prior to putting the equipment into operation.

24/7 Tech Support: 1-800-407-4545 | Customer Service: 1-800-523-2462 |
 General Tech Questions: Tech_Services@beainc.com | Tech Docs: www.beasensors.com

BEA 100 ENTERPRISE DRIVE
 PITTSBURGH, PA 15275
 PHONE: (412) 249-4100
 FAX: (412) 249-4101
 EMAIL: www.beasensors.com

TITLE: EMERGENCY ADD-ON KIT

SIZE:	DRAWN BY:	REV BY:	PART NO:
A	WJR		80.0395.00
	SCALE:	DATE:	SHEET
	NONE	16 SEPT. 2016	1 OF 1