
QUADSCAN

Application Restrictions

If your application has an adjacent wall or utilizes guide rails when the swing door(s) is/are at full open BEA recommends not installing Quadscans on the swing side of the door. Contact the BEA sales team at 800-523-2462 for alternative sensor solutions.

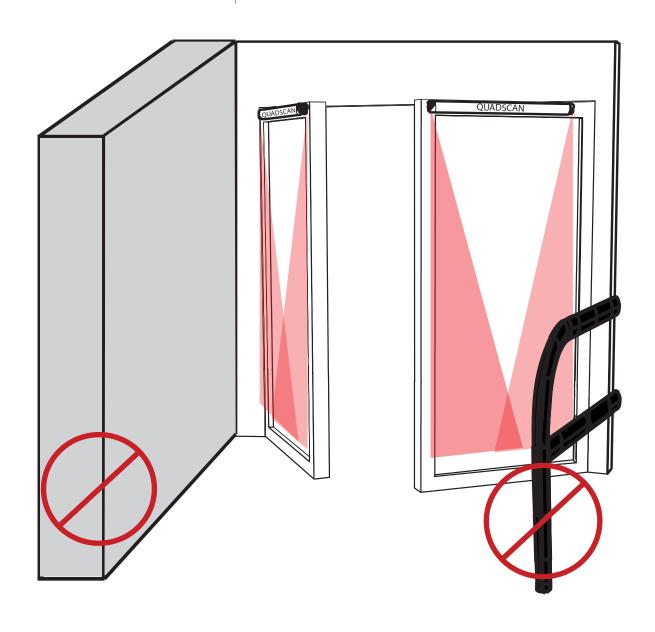




QUADSCAN

Unlock, 4,4,4,4

Remote Control Settings

- Cock, lock (to save settings)
- Select one module (LED of selected module flashes)
 Without pushing +, all modules are adjusted simultaneously.
- Launch setup
- Factory values
- Master displays the number of modules via green flashes and stores it into EEPROM

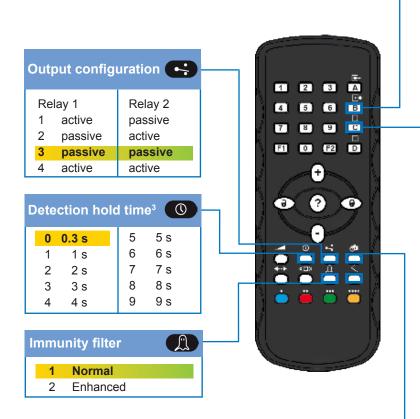

BE• Number of IR-spots¹	
4 0000 TX	
5 T X	

C		Uncovered zone (inches) ²				
		78.5	98.5	118.0		
0		0	0	0		
	1	2	3	4		
	2	4	6	8		
	3	6	9	12		
	4	8	12	16		OFF
	5	10	14	20		
	6	12	16	24		
	7	14	20	28		
	8	16	24	32		
	9	18	28	36		ON

đ	Max. prese time	presence detection					
0	30 s	4	10 min				
1	1 min	5	20 min				
2	2 min	6	60 min				
3	5 min	9	infinite				

- ¹ After changing a setting, the LED flashes orange and a new calibration has to be launched (short push on the push button or wand & 0).
- ² The DIP-switch has to be switched to ON in order to change the setting by remote control. Dimensions are approximate.
- ³ Only accessible after unlocking and pressing "9+".

See Quadscan userguide 75.5381 for complete instructions.

