


LZR H110 / LZR i30

BLUE /WHITE	MONITOR	8
BLUE	MONITOR	7
GREEN /BLACK	SAF. N.O.	6
WHITE /BLACK	SAF. COM	5
GREEN	OPT. N.C.	4
WHITE	OPT. COM	3
BLACK	POWER	2
RED	POWER	1

SEE NOTE 1

PULSED N.O. OUTPUT ON EXIT FROM SENSOR

GATE CONTROL OR OTHER DEVICE REQUIRING A PULSE ON EXIT FROM A SENSOR

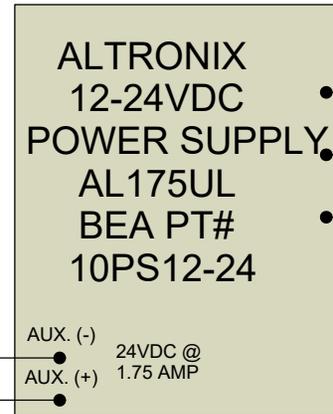

INPUT 115VAC/60Hz .6 AMP

BLACK

WHITE

GREEN

AUX. (-) 24VDC @
AUX. (+) 1.75 AMP

- NOTES:**
- 1) SET LZR i30 OUTPUT CONFIGURATION TO "2" OR "4"
 - 2) SET BR3X TO FUNCTION "36" SEE BR3X USERS GUIDE FOR INSTRUCTION ON SETUP.
 - 3) SET BR3X TIMERS AS FOLLOWS.
H1=01
H2=02
D1=_1

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION.WEB: WWW.BEASENSORS.COM

100 ENTERPRISE DRIVE
PITTSBURGH, PA 15275
PHONE: (412) 249-4100
FAX: (412) 249-4101
EMAIL: www.beasensors.com

TITLE:

BR-3X LZR H110 FOR PULSE ON EXIT FROM A PRESENCES SENSOR

SIZE: A	DRAWN BY: WJR	REV BY:	PART NO: 80.0406.00
SCALE: NONE	DATE: 06262018	SHEET 1 OF 1	