MATERIAL: PSA WHITE STICKER

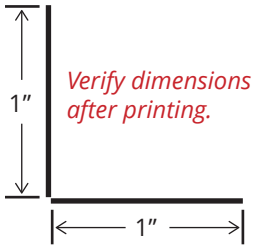

Verify dimensions after printing.

CUTTING WITH HOLE SAW:

1) Place this template on the ceiling, observing the orientation of the DETECTION LINE.

2) Using a 4 3/8″ hole saw, cut two holes using the center reference marks.

3) Cut remaining material along CUT LINE.

CUTTING WITHOUT HOLE SAW:

1) Place this template on the ceiling, observing the orientation of the DETECTION LINE.

2) Cut along CUT LINE.

DETECTION LINE

DETECTION LINE

center reference mark for hole saw

center reference mark for hole saw

CUT LINE

CUT LINE

LZR-SIGMA MOUNTING TEMPLATE

CEILING (RECESSED) MOUNT ACCESSORY

75.5932.01