


* RECEIVER (A), EMITTER (A)
 RECEIVER (B), EMITTER (B)
 WH= WHITE, BL= BLACK



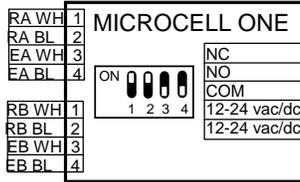


Microcell Dip Switch Settings	
ON	OFF
#1 Double Beams	Single Beams
#2 N.O.	N.C.
#3 Range Over 15'	Range Under 15'
#4 Test	Default


BODYGUARD



DK-12

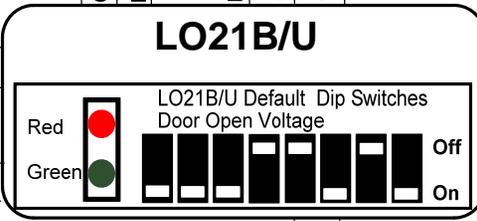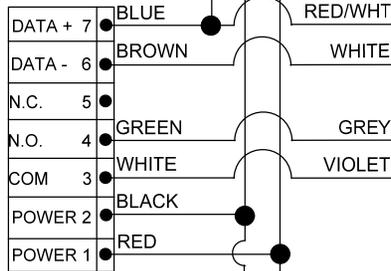

INTERIOR EAGLE

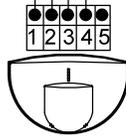

Black/Activation



Red/24VAC Common

White/Safety with Lockout

Violet/Continuous Safety

Orange 24VAC

Brown 24VAC

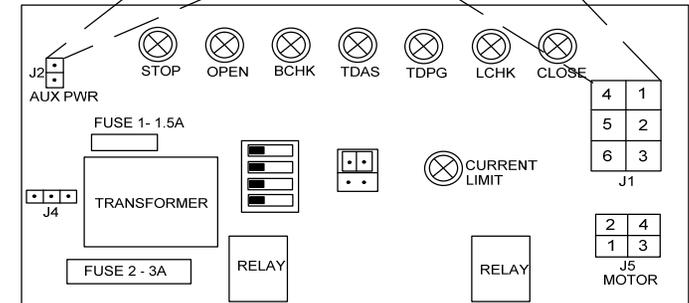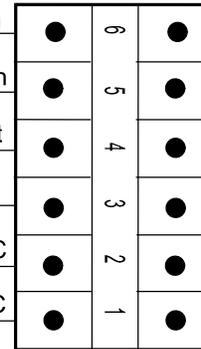

Do not leave problems unresolved. If a satisfactory solution cannot be achieved after troubleshooting a problem, please call B.E.A., Inc. If you must wait for the following workday to call B.E.A., leave the door inoperable until satisfactory repairs can be made. Never sacrifice the safe operation of the automatic door or gate for an incomplete solution. During EST 8am - 5pm call B.E.A., @ 800-523-2462. After 5pm EST all 866-249-7937 or 866-836-1863. After 5pm CST call 800-407-4545 or 888-308-8843. After 5pm MST or PST call 888-419-2564. Ensure compliance with current applicable standards. i.e. ANSI 156.10.

BEA B.E.A., Inc.
 100 Enterprise Drive Pittsburgh, PA 15275
 PH: (412) 249-4100 FAX: (412) 249-4101
www.beasensors.com

TITLE: GYROTECH MAGNUM CONTROL, LO21B/U, BODYGUARD

SIZE: A	CAGE CODE:	DWG NO:	FILE OF: Tech Support	DRAWN BY: JED	REV:
SCALE: NTS	DATE: 4 APRIL, 2005	SHEET: 1 OF 1			