


- NOTES:**
- 1) SET BODYGUARD OUTPUT CONFIGURATION TO "2"
 - 2) CHANGE PARAMETER " Sr " SETTING TO 7 FOR BODYGUARD OR DK12.
 - 3) REMOVE JUMPERS AT 15 & 3 AND 11 & 3

IF AFTER TROUBLESHOOTING A PROBLEM, A SATISFACTORY SOLUTION CANNOT BE ACHIEVED, PLEASE CALL B.E.A., INC. FOR FURTHER ASSISTANCE DURING EASTERN STANDARD TIME AT 1-800-523-2462 FROM 8AM - 5PM. FOR AFTER-HOURS, CALL EAST COAST: 1-866-836-1863 OR 1-800-407-4545 / MID-WEST: 1-888-308-8843 / WEST COAST: 1-888-419-2564. DO NOT LEAVE ANY PROBLEM UNRESOLVED. IF YOU MUST WAIT FOR THE FOLLOWING WORKDAY TO CALL B.E.A., LEAVE THE DOOR INOPERABLE UNTIL SATISFACTORY REPAIRS CAN BE MADE. NEVER SACRIFICE THE SAFE OPERATION OF THE AUTOMATIC DOOR OR GATE FOR AN INCOMPLETE SOLUTION. WEB: WWW.BEASENSORS.COM

100 ENTERPRISE
PITTSBURGH, PA
PHONE: (412) 249-
FAX: (412) 249-
EMAIL: www.beas

TITLE:
DORMA ED 100/2
BODY GUARD A

SIZE:	DRAWN BY:	REV BY:
A	SCALE:	DATE:
	NONE	17th Decer

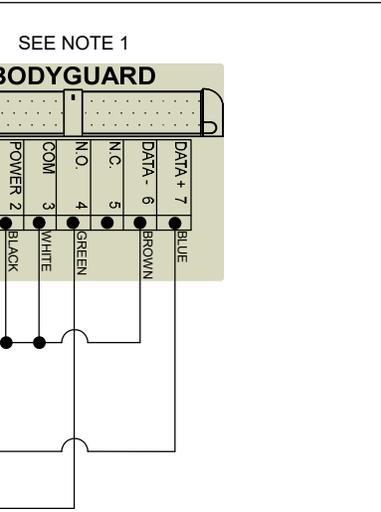

DRIVE
15275
-4100
-4101
sensors.com

250 WITH
AND SUPER SCANS.

PART NO:	80.0357.01
SHEET	1 OF 1