



Visit website for  
available languages of  
this document.

# FALCON



## Activation Sensor for Automatic, Industrial Doors

FALCON: for normal to high mounting (11.5 - 23 ft)

FALCON XL: for low mounting (6.5 - 11.5 ft)

FALCON WIDE: for wide detection field

### WHAT'S IN THE BOX

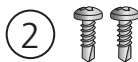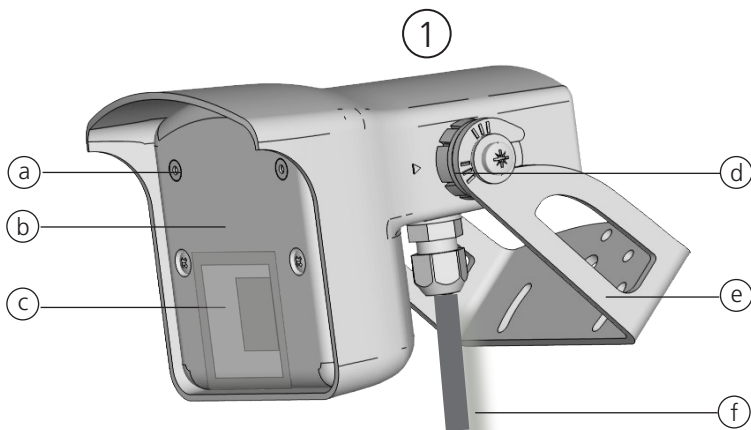

1. sensor (10FALCON/10FALCONW/10FALCONXL)

- a. push buttons
- b. front face
- c. radar antenna
- d. angle indication
- e. bracket
- f. cable (35.1568)

2. screw kit (50.1818)

3. User's Guide (75.5835)


## TECHNICAL SPECIFICATIONS

Technology:	microwave doppler radar
Transmitter frequency:	24.150 GHz
Transmitter radiated power:	< 20 dBm EIRP
Transmitter power density:	< 5 mW/cm <sup>2</sup>
Mounting height:	FALCON: 11.5 – 23 ft FALCON XL: 6.5 – 11.5 ft FALCON WIDE: 11.5 – 21 ft
Detection zone:	FALCON: 13 × 16 ft @ 16ft FALCON XL: 13 × 6.5 ft @ 8.2 ft FALCON WIDE: 30 × 11ft @ 21ft. (typical at 30° and field size 9)
Min. detection speed:	2 in/s*
Supply voltage:	12 – 24 VAC ±10%; 12 – 24 VDC +30% / -10%
Mains frequency:	50 – 60 Hz
Power consumption:	< 2W
Output:	relay (free of potential change-over contact)
max. contact voltage:	42V AC/DC
max. contact current:	1A (resistive)
max. switching power:	30 W (DC) / 60 VA(AC)
Temperature range:	-22 – 140 °F
Degree of protection:	IP65
Dimensions:	5 in (L) x 3.75 in (W) x 4 in (H)
Tilt adjustment angle:	0 – 180° vertical
Materials:	ABS and polycarbonate
Weight:	0.875 lbs
Cable length:	33 ft
Norm conformity:	R&TTE 1999/5/EC; EMC 2004/108/EC


\* measured in optimal conditions

*Specifications are subject to change without prior notice.  
All values measured in specific conditions.*


## DIMENSIONS (inches)

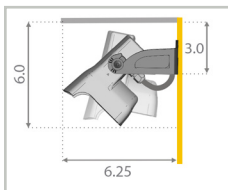

Wall mounting

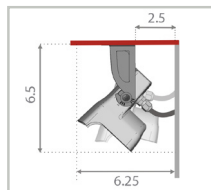



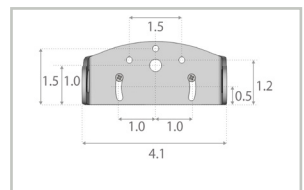


Ceiling mounting






Bracket dimensions

## LED INDICATIONS

### LED BEHAVIOR:

-  LED flashes
-  LED flashes quickly
-  LED flashes slowly
-  LED flashes x times
-  LED is off

### LED COLOR:

-  no LED = no detection
-  red LED = detection
-  red/green blinking = power on

## HOW TO USE THE REMOTE CONTROL

### ADJUSTING ONE OR MORE PARAMETERS




### CHECKING A VALUE




*x = number of flashes = value of parameter*

### RESTORING TO FACTORY VALUES

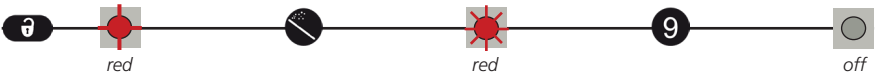

### SAVING AN ACCESS CODE

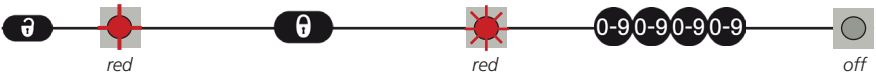

Once you have saved an access code, you always need to enter this code to unlock the sensor.

If you forget the access code, **cycle the power**. For the first minute, you can access the sensor without an access code.


### DELETING AN ACCESS CODE




## INSTALLATION TIPS

- The sensor must be firmly fastened in order not to vibrate.
- The sensor must not be placed directly behind a panel or any kind of material.
- The sensor must not have any object likely to move or vibrate in its sensing field.
- The sensor must not have any fluorescent lighting in its sensing field.


### 1 MOUNTING & WIRING

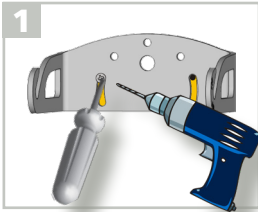

Remove the bracket from the sensor. Drill 2 holes accordingly. Mount the bracket firmly.

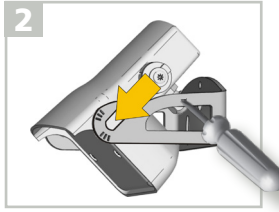

Position the sensor on the bracket and fasten the screws firmly.

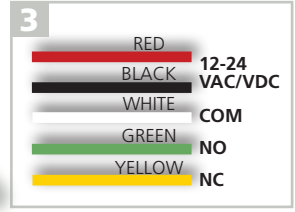


Connect the wires to the door controller. Choose between NO and NC contact.


*European wire color cross-reference:*

**US** ↔ **EURO**  
 red ↔ green  
 black ↔ brown  
 white ↔ white  
 green ↔ yellow  
 yellow ↔ gray

### 2 MOUNTING ADJUSTMENT

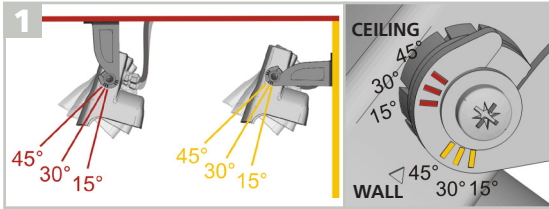


Adjust the angle of the sensor to position the detection field.

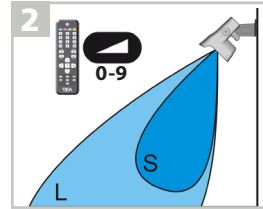


Adjust the field size with the remote control or the push buttons.


**FALCON** (mtg ht: 16 ft)

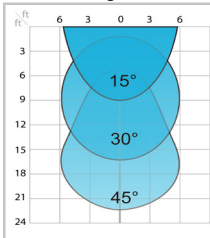

**FALCON XL** (mtg ht: 8 ft)

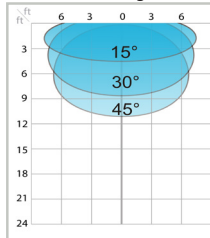

**FALCON WIDE** (mtg ht: 11.5 ft)

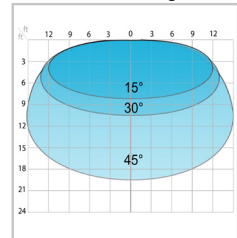

All detection field dimensions were measured in optimal conditions and with field size value 9.

### 3 DETECTION FILTER (REJECTION MODE)

Choose the correct detection filter for your application with the remote control or push buttons.

#### Detection of all targets

(pedestrians and parallel traffic are detected)

1 = no specific filter

2 = filter against disturbances (recommended in case of vibrations, rain etc.)

#### Detection only of vehicles moving toward the sensor\*

(pedestrians and parallel traffic are not detected + disturbances are filtered)

Value recommendations according to angle and height:

	23 ft – 11.5 ft	8 ft
-15°	3	3
-30°	4	4
-45°	5	4
+45°	6	5


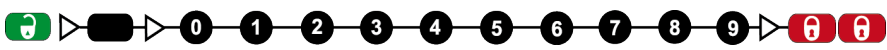
XL


*Always check if the chosen value is optimal for the application.*


*The object size and nature can influence the detection.*



\* The vehicle detection filter increases the response time of the sensor.



## POSSIBLE SETTINGS BY REMOTE CONTROL














FIELD SIZE:  XXS XS S > > > > **L** XL XXL

HOLD-OPEN TIME:  0.5 s 1 s 2 s 3 s 4 s 5 s 6 s 7 s 8 s 9 s

OUTPUT CONFIGURATION:  **A** P  A = active output; relay energizes upon detection  
P = passive output; relay de-energizes upon detection


DETECTION MODE:   **uni** uni AWAY bi = two-way detection  
uni = one-way detection towards sensor  
uni AWAY = one-way detection away from sensor










DETECTION FILTER:          

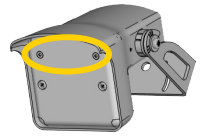 FACTORY VALUES

## POSSIBLE SETTINGS BY PUSH BUTTONS

- TO START OR END AN ADJUSTMENT SESSION, press and hold either push button until the LED flashes or stops flashing.
- To scroll through the parameters, press the right push button.
- To change the value of the chosen parameter, press the left push button.
- To reset to factory values, press and hold both push buttons until both LEDs flash.



	Parameter number	Value (factory)
1 FIELD SIZE		 (7)
2 HOLD-OPEN TIME		(0)
3 OUTPUT CONFIGURATION		 (1)
4 DETECTION MODE		 (2)
5 DETECTION FILTER		 (1)

## TROUBLESHOOTING


	Door remains closed. LED is off.	Sensor power is off.	Check wiring and power supply.
	Door does not react as expected.	Improper output configuration on sensor.	Check the output configuration setting on each sensor connected to the door operator.
	Door opens and closes constantly.	The sensor is disturbed by door motion or vibrations caused by door motion.	Ensure sensor is secured properly.
			Ensure detection mode is unidirectional.
			Increase tilt angle.
			Increase detection filter value.
	Reduce field size.		
	Door opens for no apparent reason.	It rains and the sensor detects raindrops or vibrations.	Ensure detection mode is unidirectional.
			Increase detection filter value.
		In highly reflective environments, the sensor detects objects outside of its detection field.	Change the antenna angle.
			Reduce field size.
			Increase detection filter value.
	Vehicle detection filter is used, but pedestrians are still detected.	Chosen value is not optimal for the given application.	Increase detection filter value.
			Decrease sensor angle.
			Increase mounting height.
			Ensure detection mode is unidirectional.
	LED flashes quickly after unlocking.	Sensor needs access code to unlock.	Enter correct access code.
			If you forgot the code, cycle the power to access the sensor without access code. Change or delete the access code.
	Sensor does not respond to the remote control.	Batteries in the remote control are weak or installed improperly.	Check batteries and change if necessary.

Can't find your answer? Visit [www.beainc.com](http://www.beainc.com) or scan QR code for Frequently Asked Questions!



Before contacting BEA Technical Support, locate the serial number of your sensor.

SERIAL NUMBER

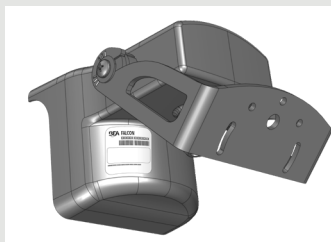

# ACCESSORIES AND REPLACEMENT PARTS

## ACCESSORIES



**10INDBRACKET**  
Adjustable mounting bracket



**10MINIBRACKET**  
Short, adjustable mounting bracket



**10WBA**  
Universal mounting bracket arm



**10WBAMOUNT**  
Universal mounting bracket plate



**20.5365**  
Cable, 100 ft



**10REMOTE**  
BEA universal remote control

## REPLACEMENT PARTS



**35.1568**  
Cable, 30 ft

### BEA, INC. INSTALLATION/SERVICE COMPLIANCE EXPECTATIONS

BEA, Inc., the sensor manufacturer, cannot be held responsible for incorrect installations or incorrect adjustments of the sensor/device; therefore, BEA, Inc. does not guarantee any use of the sensor/device outside of its intended purpose.

BEA, Inc. strongly recommends that installation and service technicians be AAADM-certified for pedestrian doors, IDA-certified for doors/gates, and factory-trained for the type of door/gate system.

Installers and service personnel are responsible for executing a risk assessment following each installation/service performed, ensuring that the sensor/device system performance is compliant with local, national, and international regulations, codes, and standards.

Once installation or service work is complete, a safety inspection of the door/gate shall be performed per the door/gate manufacturer's recommendations and/or per AAADM/ANSI/DASMA guidelines (where applicable) for best industry practices. Safety inspections must be performed during each service call – examples of these safety inspections can be found on an AAADM safety information label (e.g. ANSI/DASMA 102, ANSI/DASMA 107, UL294, UL325, and International Building Code).

Verify that all appropriate industry signage, warning labels, and placards are in place.

