


DOR-O-MATIC INTERFACE WITH SAFETY BEAMS, NO SUPERSCANS

BODYGUARD/ DK-12

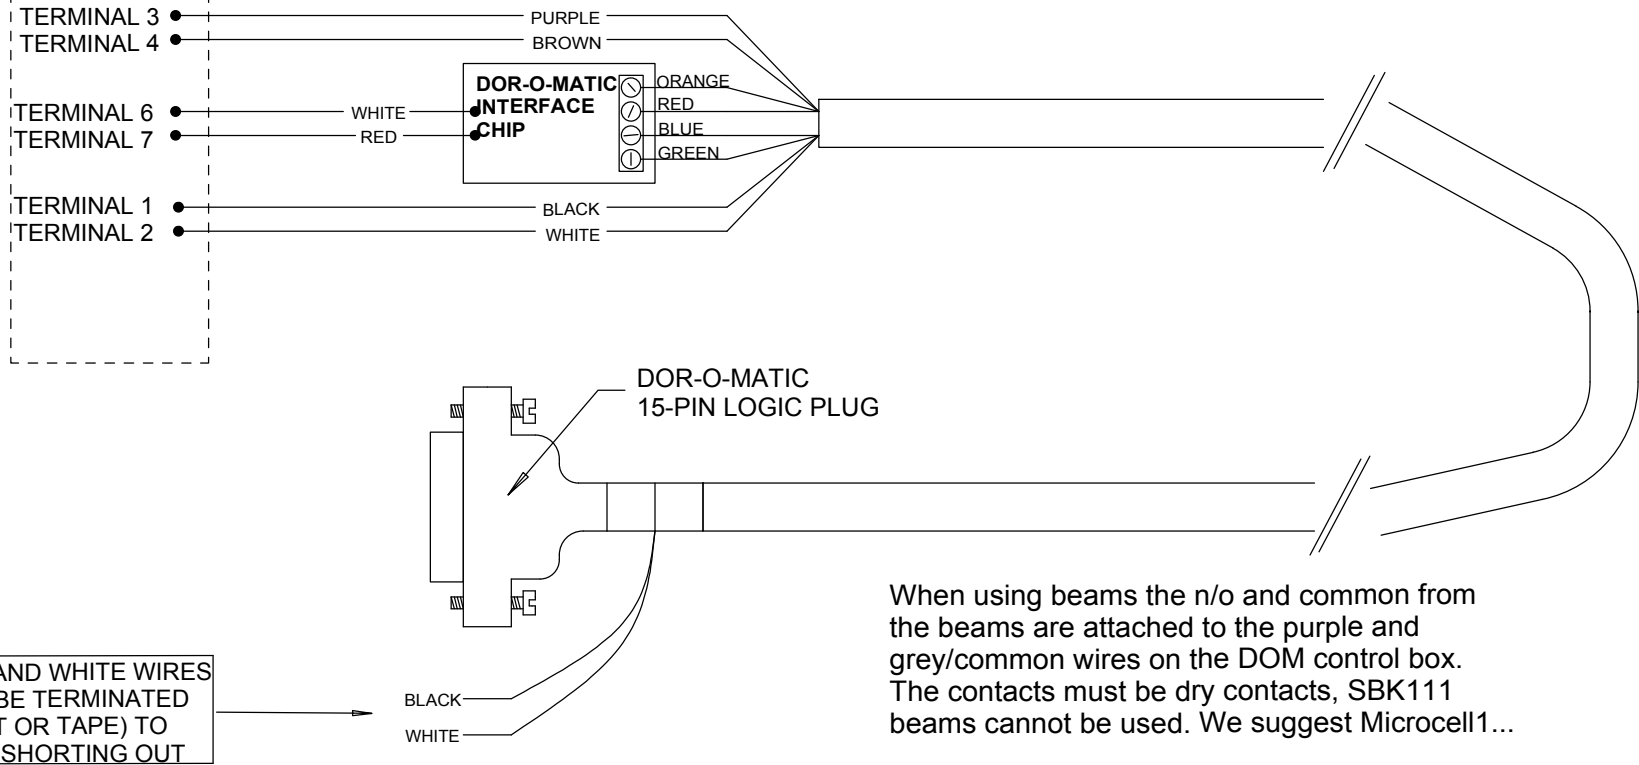

When using beams the n/o and common from the beams are attached to the purple and grey/common wires on the DOM control box. The contacts must be dry contacts, SBK111 beams cannot be used. We suggest Microcell1...

CONNECT DOR-O-MATIC CABLE TO DOR-O-MATIC INTERFACE CHIP INSIDE B.E.A. BODYGUARD/ DK-12 AND 7-PIN CONNECTOR OF BODYGUARD OR DK-12

		B.E.A., Inc. 100 Enterprise Drive Pittsburgh, PA 15275 PH: (412) 249-4100 FAX: (412) 249-4101 www.beasensors.com		
Title: DOR-O-MATIC INTERFACE WITH SAFETY BEAMS				
Part Number: 77679-900 HARNESS				
SIZE A	CAGE CODE	DWG NO 80.0073	FILE OF: GDM	DRAWN BY: KJG
SCALE None	Date: 11 NOV 2000	SHEET 1 of 1	REV B	