

QUICK SET-UP GUIDE

IXIO FAMILY

Activation and safety sensors for automatic sliding doors




Refer to the User's Guide for full instructions.


READ BEFORE BEGINNING INSTALLATION & SET-UP




The sensor should be mounted securely to avoid extreme vibrations.

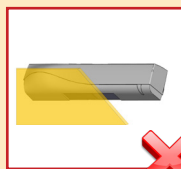

Do not cover the sensor.

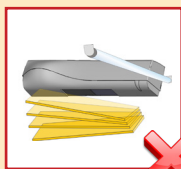

Avoid moving objects and light sources in the detection field.

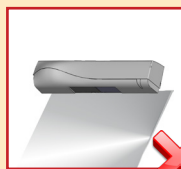


Avoid highly reflective objects in the infrared field.




The door control unit and the header cover profile must be correctly grounded.



Only trained and qualified personnel are recommended for installation and set-up of the sensor.

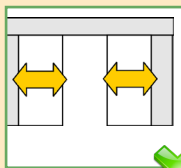


Following installation, always test for proper operation (according to ANSI 156.10) before leaving the premises.

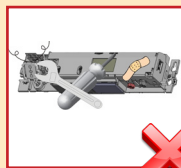

The warranty is invalid if unauthorized repairs are made or attempted by unauthorized personnel.

This device can be expected to comply with Part 15 of the FCC Rules, provided it is assembled in exact accordance with the instructions provided with this kit. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

1 MOUNTING & WIRING

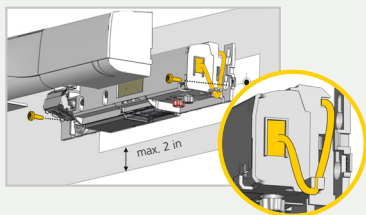


Sensor connectivity (power and relays) must utilize only the supplied harness.


Sensor power must be supplied from a Class 2 supply source limited to 15 W.

Sensor is intended to be monitored for proper operation by the door operator or system.

Harness shall be routed separated from any Mains or non-Class 2 voltage cable for correct operation or shall be rated for the Mains voltage, and suitable protection and routing means shall be used according to National and Local Codes to prevent damage to the harness.

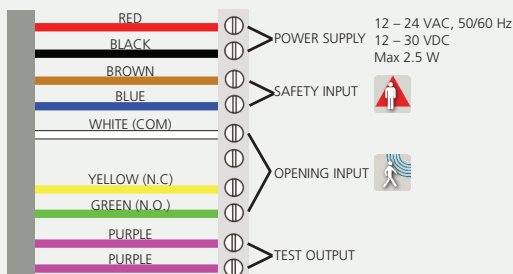


CAMERA HARNESS FOR DT1 V

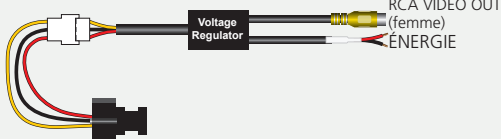


2 RADAR OPENING IMPULSE FIELD (*DT1 SENSORS ONLY*)

ANGLE

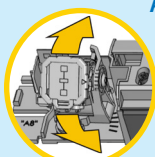


TILT

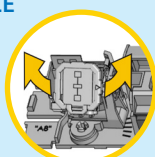


ROTATE

WIDTH

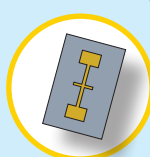


WIDE

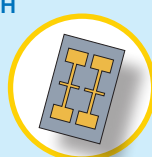


NARROW

3 INFRARED SAFETY FIELD


ANGLE

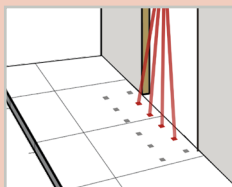


ACTIVATE CURTAINS

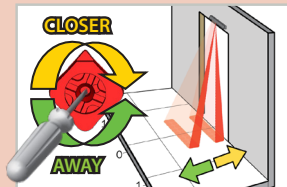

ADJUST ANGLE

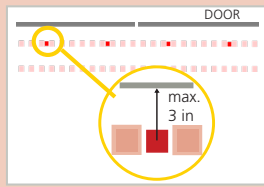

WIDTH

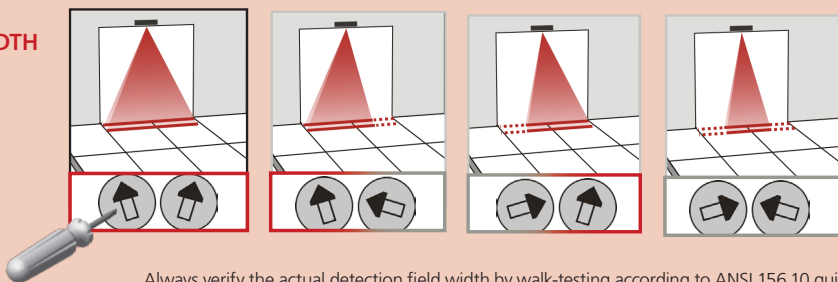

Always verify the actual detection field width by walk-testing according to ANSI 156.10 guidance.

4 SET-UP

SET-UP 1 (QUICK)

reference picture

either hold the knob for 2 seconds, or use the remote control buttons as specified



2 s


OR



SET-UP 2 (ASSISTED)

test of full door cycle + reference picture

either hold the knob for 4 seconds, or use the remote control buttons as specified



4 s

OR



TEST THE PROPER OPERATION OF THE INSTALLATION BEFORE LEAVING THE PREMISES!

LED-SIGNALS



(green)

Motion detection (DT1 sensors) / AUX (ST sensors)



(red)

Presence detection



LED flashes



LED flashes x times



LED flashes red-green



LED flashes quickly



LED is off



OVERVIEW OF SETTINGS

highlighted blue = DT sensors only

highlighted red = ST sensors only

BASIC

	0	1	2	3	4	5	6	7	8	9	
Back More											
RAD: FIELD SIZE	small	>	>	>	>	>	>	>	>	large	
AIR: WIDTH											see note 1
AIR: OUTPUT		DeEner/NO Ener/NC	Ener/NC DeEner/NO	Ener/NC DeEner/NO	DeEner/NO DeEner/NO						see note 2
TEST	off	on									see note 3
More Back											
Back More											
RAD: FIELD SIZE	small	>	>	>	>	>	>	>	>	large	
RAD: IMMUNITY		low	>	>	>	>	>	>	>	high	
RAD: DIRECTION	off	bi	uni	uni MTF	uni away						see note 4
RAD: HOLD TIME	0.5 s	1 s	2 s	3 s	4 s	5 s	6 s	7 s	8 s	9 s	
RAD: REENTRY	small	>	>	>	>	>	>	>	>	large	
RAD: OUTPUT		DeEner/NO Ener/NC	Ener/NC DeEner/NO	Ener/NC DeEner/NO	DeEner/NO DeEner/NO						see note 2
AIR: IMMUNITY		normal	enhanced					mode B			
AIR: WIDTH											see note 1
AIR: NUMBER		1	2								
AIR: PRESENCE TIME			30 s	1 min	2 min	5 min	10 min	20 min	60 min	infinite	see note 5
AIR: FREQ		A	B								
AIR: OUTPUT		DeEner/NO Ener/NC	Ener/NC DeEner/NO	Ener/NC DeEner/NO	DeEner/NO DeEner/NO						see note 2
TEST	off	on									see note 3
REDIRECTION		motion	motion or presence								see note 6
REDIRECTION		presence	aux presence								see note 7
FACTORY RESET									full reset	partial reset	see note 8

ZIP CODE
ID #

CONFIG P/N

SOFT P/N

ERROR LOG

AIR: SPOTVIEW

AIR: C1 ENERG

AIR: C2 ENERG

all parameter settings in zipped format (see application note on ZIP CODE – 76.0024)
unique ID-number

last 10 errors + day indication

view of spot(s) that trigger detection

signal amplitude received on curtain

signal amplitude received on curtain 2

POWERSUPPLY

OPERATINGTIME

RESET LOG

PASSWORD

ADMIN

supply voltage at power connector

power duration since first startup

delete all saved errors

LCD and remote control password (0000= no password)

enter code to access admin mode

OVERVIEW OF SETTINGS (cont.)

NOTES	
Note 1	Always additionally adjust the arrow position on the sensor with a screwdriver.
Note 2	DeEner: De-Energized relay Energ: Energized relay NO: normally open NC: normally closed
Note 3	The sensor LED will briefly flash RED during monitoring communication with door control. This indicates that external monitoring is functional. Monitoring functionality must be active on the sensor and monitoring wires must be properly connected to the door control.
Note 4	MTF: motion tracking feature
Note 5	min. value for DIN18650: 1 min min. value for EN16005: 30 s
Note 6	opening output is active in case of: 0 motion detection 1 motion or presence detection
Note 7	0 presence detection on safety input 1 presence detection on safety + auxiliary inputs
Note 8	partial: outputs are not reset

TECHNICAL SPECIFICATIONS

Supply voltage:	12 – 24 VAC ±10% 12 – 30 VDC ±10%	<i>to be operated from SELV-compatible power supplies only</i>
Voltage regulator (built into wire harness):	6.6 – 36 VDC (±10%) 6 – 28 VAC (±10%)	
Mounting height:	6'6" – 11'6"	<i>local regulations may impact acceptable mounting height (pedestrian applications only)</i>
Output:	DT1 & ST SENSORS: Electro-mechanical-relay (potential and polarity free) Max. contact current: 1 A Max. contact voltage: 30 VDC Adjustable Holdtime: 0.5 – 9 s	DT1 & ST SENSORS: Solid-state-relay (potential and polarity free) Max. contact current: 400 mA Max. contact voltage: 42 VAC / VDC Holdtime: 0.3 – 1 s
Test/Monitoring Input:	Sensitivity: Low: < 1 V High: > 10 V (max. 30 V) Response time on test request: typical < 5 ms	



Download the BEA DECODER app
for a quick overview of settings



BEA INSTALLATION/SERVICE COMPLIANCE EXPECTATIONS

BEA, the sensor manufacturer, cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor/device; therefore, BEA does not guarantee any use of the sensor outside of its intended purpose.

BEA strongly recommends that installation and service technicians be AAADM-certified for pedestrian doors, IDA-certified for doors/gates, and factory-trained for the type of door/gate system.

Installers and service personnel are responsible for executing a risk assessment following each installation/service performed, ensuring that the sensor system installation is compliant with local, national, and international regulations, codes, and standards.

Once installation or service work is complete, a safety inspection of the door/gate shall be performed per the door/gate manufacturer recommendations and/or per AAADM/ANSI/DASMA guidelines (where applicable) for best industry practices. Safety inspections must be performed during each service call – examples of these safety inspections can be found on an AAADM safety information label (e.g. ANSI/DASMA 102, ANSI/DASMA 107).

Verify that all appropriate industry signage and warning labels are in place.



BEA hereby declares that IXIO sensors are in conformity with the basic requirements and the other relevant provisions of the directives 1999/5/EC, 2006/95/EC and 2006/42/EC.

Notified Body for EC-type inspection: 0044 - TÜV NORD CERT GmbH, Langemarckstr. 20, D-45141 Essen

EC-type examination certificate number: 44 205 12 405836-001

Angleur, October 2014 – Pierre Gardier, authorized representative and responsible for technical documentation

The complete declaration of conformity is available on our website: www.bea-pedestrian.be

Only for EC countries: According to the European Guideline 2012/19/EU for Waste Electrical and Electronic Equipment (WEEE)

