


**LZR<sup>®</sup>-s600**  
LASER SCANNER FOR BUILDING AUTOMATION & SECURITY  
with max. detection range of 82 ft x 82 ft

User's Guide

# READ BEFORE BEGINNING INSTALLATION/PROGRAMMING/SET-UP

## SAFETY

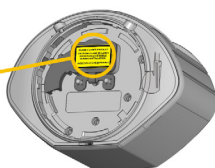

The device contains IR and visible laser diodes.

IR laser: wavelength 905nm; max. output pulse power 75W (Class 1 according to IEC 60825-1)


Visible laser: wavelength 650nm; max. output CW power 3mW (Class 3R according to IEC 60825-1)

The visible laser beams are inactive during normal operation. The installer can activate the visible lasers if needed.




### CAUTION!


Use of controls, adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure.

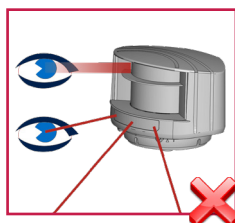


Do not look into the laser emitter or the visible red laser beams.

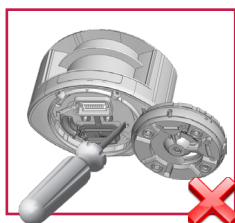

The warranty is void if unauthorized repairs are made or attempted by unauthorized personnel.

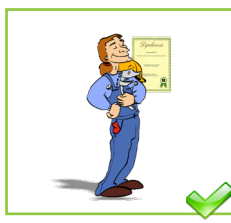


Only trained and qualified personnel are recommended to install and set up the sensor.

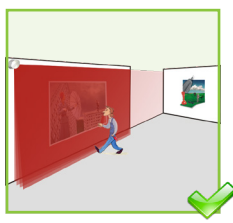


Test the proper operation of the installation before leaving the premises.


## INSTALLATION AND MAINTENANCE

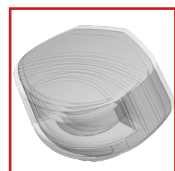


Avoid extreme vibrations.

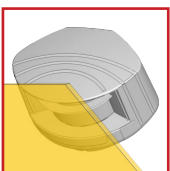


Do not cover the front screens.

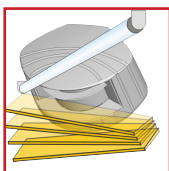


Avoid moving objects and light sources in the detection field.

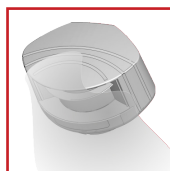

Avoid the presence of smoke and fog in the detection field.

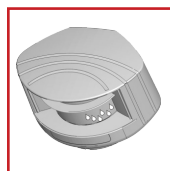

Avoid condensation.

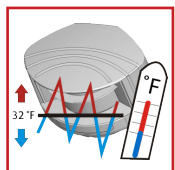


Avoid exposure to sudden and extreme temperature changes.




Avoid direct exposure to high pressure cleaning.



Do not use aggressive products to clean the front screens.

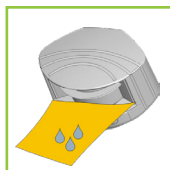


Wipe the front screens regularly with a clean and damp cloth.

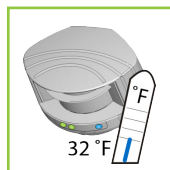


Keep the sensor permanently powered in environments where the temperature can descend below 32 °F.

## DESCRIPTION

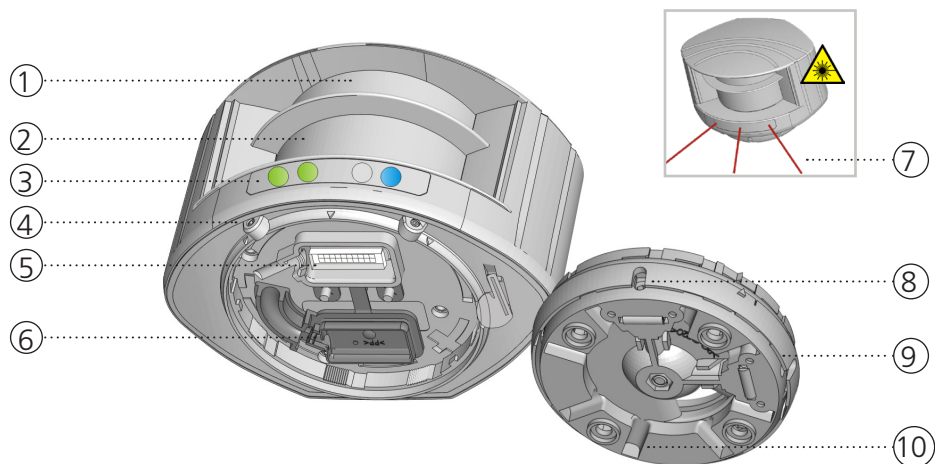

- |                                 |  |
|---------------------------------|--|
| 1. laser sweep emission         | 6. protection cover                      |
| 2. laser sweep reception        | 7. visible laser beams (3)               |
| 3. LED signals (4)              | 8. notches for tilt angle adjustment (2) |
| 4. screws for position lock (2) | 9. adjustable bracket                    |
| 5. connector                    | 10. cable conduits (4)                   |

## LED SIGNAL




1. Detection LED: relay 1 – opening field
2. Detection LED: relay 2 – safety field
3. Error LED
4. Power LED


### DETECTION LEDs



### ERROR LED



### POWER LED



LED flashes quickly



LED flashes



LED flashes slowly



LED is off




All 4 LEDs can be switched off and on again by remote control. This can be useful in cases where the sensor should not draw any attention.



## SYMBOLS



Caution!  
Laser radiation



Remote control  
sequence



Possible  
remote control  
adjustments



Factory values



Alarm



Tip



Quick  
installation

# READ BEFORE BEGINNING INSTALLATION/PROGRAMMING/SET-UP

## HOW TO USE THE REMOTE CONTROL



After unlocking, the red LED flashes and the sensor can be adjusted by remote control.




If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.




To end an adjustment session, always lock the sensor.

## ADJUSTING ONE OR MORE PARAMETERS



## CHECKING A VALUE




Green 4 = field width: 4.2 m  
Orange 1  
Green 2

Orange 3 = field width is defined by Learn

X = NUMBER OF FLASHES = VALUE OF THE PARAMETER

## RESTORING TO FACTORY VALUES



## SAVING AN ACCESS CODE

The access code is recommended for sensors installed close to each other.



## DELETING AN ACCESS CODE




Enter the existing code




30 minutes after last use, the sensor locks access to the remote control session. To regain access, cycle the power. The remote control session will then be accessible for another 30 minutes.



PROTECTION OF WORKS OF ART: WARNING & ALARM

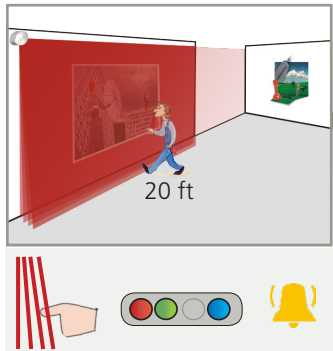

Field 1 (4 active curtains) triggers relay 1:  
**WARNING**

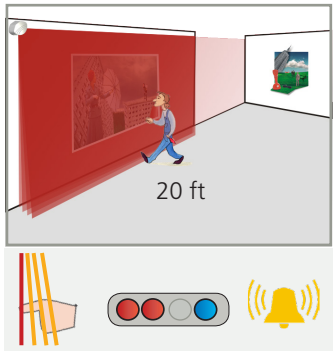

Field 2 (only curtain C1 active) triggers relay 2:  
**ALARM**


Adapt the field widths (ex: 20 ft):




Reduce field 2 to one curtain (C1):



DAY AND NIGHT FEATURE

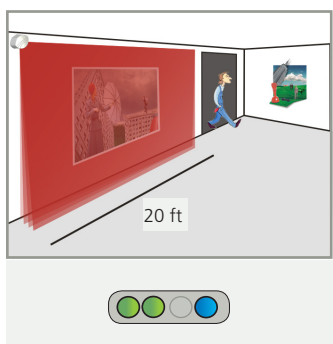

During day time, only field 1 is active and triggers relay 1.

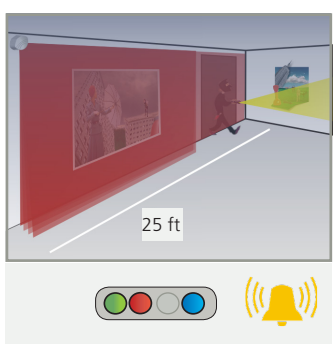

During night time, field 2 is active as well and triggers relay 2 (intrusion alarm).


Adapt the field width of field 1 (ex: 20 ft):




Adapt the field width of field 2 (ex: 25 ft):




# 1 MOUNTING

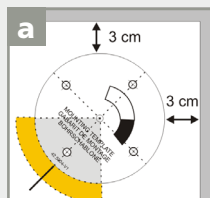


Use the mounting template to position the sensor correctly.  
The gray area indicates the detection range.

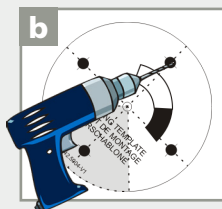


Drill 4 holes as indicated on the mounting template.  
Drill a hole (1/2 inch min.) for the cable if possible.

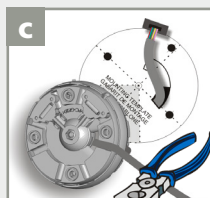


Pass the cable  $\pm 4$  inches through the cable opening.  
If drilling an opening is not possible, use the cable conduits on the back side of the bracket.

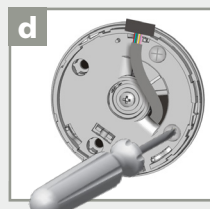

Position the bracket and secure using the 4 screws to avoid vibrations.

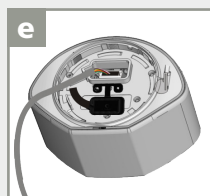


Open the protection cover, plug the connector, and position the cable in the slit.

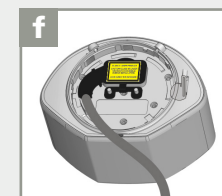


Close and secure the protection cover.

**NOTE:** FACTORY WARRANTY VOIDED IF PROTECTION COVER IS NOT USED!

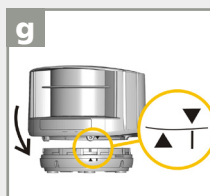

Position the housing on the bracket.

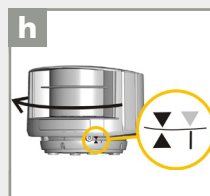


Rotate the sensor until the two triangles are face to face.

# 2 WIRING

Use the visual aid below to ensure correct wiring to the door control.

| WIRE COLORS    | FUNCTION                   |
|----------------|----------------------------|
| Red (+)        | Power supply (12 – 35 VDC) |
| Black (-)      |                            |
| White          | Relay 1: Opening Field     |
| Green          |                            |
| White/Black    | Relay 2: Safety Field      |
| Green/White    |                            |
| Blue (+)       | Test                       |
| Blue/White (-) |                            |
| Orange         | Learn                      |
| Orange/Black   |                            |

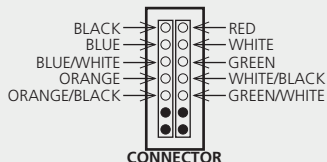

To **launch a Learn**, apply power for the length of time in which the Learn is to be performed (minimum of 1 millisecond).



**No test function:**  
connect blue and blue/white wires to power supply (no polarity)




**No Learn via input:**  
connect orange and orange/black wires to ground/common

### 3 POSITIONING





Unlock the sensor and activate the visible laser beams.

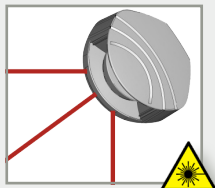


The visible laser beams indicate the approximate position of curtain C1 and the angle of the detection field.


The visible laser beams will remain active for 15 minutes or can be turned off the same way they were activated.

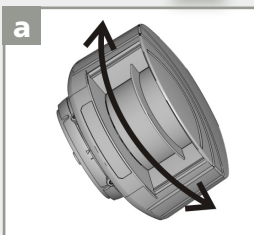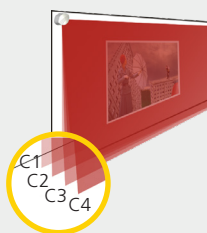

Adjust the **lateral position** of the detection field.

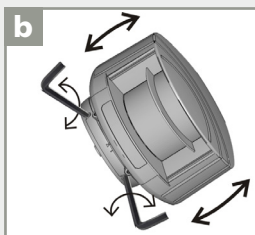

Adjust the **tilt angle** of the detection field with the 3 mm hex key.

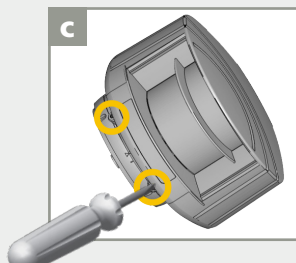

**Lock the position** of the mounting bracket to avoid malfunctioning in case of extreme vibrations.

### 4 MOUNTING SIDE


Select the corresponding mounting side.

The sensor learns its environment and automatically determines the detection field(s). Both red LEDs flash slowly and the 3 visible laser beams automatically light up for 30 seconds.

**!** Stay outside of the detection field to avoid disturbances.




WITH BACKGROUND

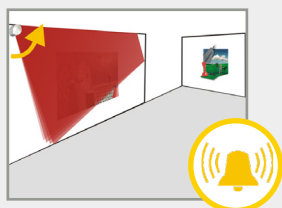

The sensor memorizes the floor as reference point and signals a fault when its orientation is changed (observe orange flashing LED).

WITHOUT BACKGROUND

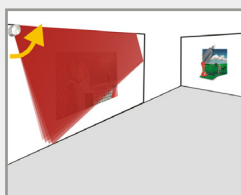

No reference point is memorized. No alarm in case of interference.

## 5 FIELD DIMENSIONS

## FIELD 1

WIDTH



020 - 984 000

$$20 \text{ in} - 984 \text{ in}$$

field 2 = field 1

394 in

HEIGHT



020 - 984 000

$$20 \text{ in} - 984 \text{ in}$$

no field

394 in

## FIELD 2

WIDTH



020 - 984 000

$$20 \text{ in} - 984 \text{ in}$$

no field

394 in


HEIGHT



004 - 984


$$4 \text{ in} - 984 \text{ in}$$

394 in

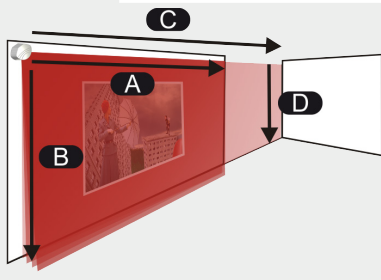

## EXAMPLES



**A**  **0 6 2** for a field width of 62 in



**BE-045** for a field height of 45 in

**IMPORTANT:** Test the proper operation of the installation before leaving the premises.


## LEARN

The Learn can be launched either via remote control or by connecting the orange and orange/black wires.


Launch a Learn under the following conditions:

- after changing the sensor position
- when new objects are added to or changed in the detection zone

During Learn, the sensor learns its surroundings and adapts the detection zone shape. Objects in the detection field will be cut out.

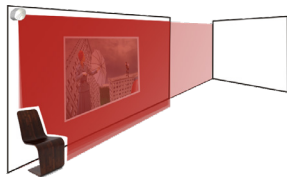


Stay outside of the detection field to avoid disturbances.





REMOTE CONTROL ADJUSTMENTS (OPTIONAL)

ACTIVE DETECTION CURTAINS

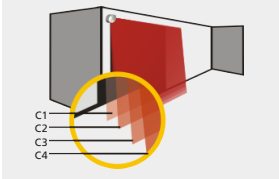

CURTAIN C1 C2 C3 C4

- 0 deactivate curtain on both fields
- 1 activate curtain only on field 1
- 2 activate curtain only on field 2
- 9 activate curtain on both fields

Ex:



C1 + C2 are active on safety field  
C3 + C4 are active on optional field



C1 is active on both fields  
C2+C3 are active on safety field  
C4 is inactive




All curtains are active on both fields

The distances between the curtains depend on the mounting height and location. When mounted on the left, the distance between curtain C1 and curtain C4 is approximately 0.3 ft for every foot (mounting height).


**Example:** At 10 feet, the distance between C1 and C4 is 1.5 feet.

UNCOVERED ZONE




| F2 | 0 | 1 | 2 | 3 | 4  |
|----|---|---|---|---|----|
|    | 2 | 4 | 6 | 8 | 10 |
|    |   |   |   |   |    |

IMMUNITY FILTER



| FOR CRITICAL ENVIRONMENTS<br>(e.g. RAIN, SNOW, FOG) |             |             |              | FOR CRITICAL OBJECTS<br>(e.g. BLACK CARS) |             |             |              |
|---|-------------|-------------|--------------|---|-------------|-------------|--------------|
| indoor  | outdoor low | outdoor med | outdoor high | indoor                                    | outdoor low | outdoor med | outdoor high |
| 1   | 2           | 3           | 4            | 5   | 6           | 7           | 8            |

MIN. OBJECT SIZE

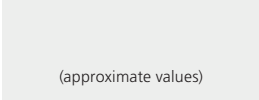

| 0   | 1 | 2 | 3 | 4 |
|-----|---|---|---|---|
| off | 2 | 4 | 6 | 8 |
|     |   |   |   |   |

OUTPUT ACTIVATION DELAY

The outputs are triggered after a constant detection time of x ms.  
(ex: value 3 = 300 ms)  
(approximate values)


| 0   | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| off | 100 | 200 | 300 | 400 | 500 | 600 | 700 | 800 | 900 |
|     |     |     |     |     |     |     |     |     |     |

DETECTION FIELD REDIRECTION


R = relay output

| F1 | 0       | 1                  |
|----|---------|--------------------|
| R1 | field 1 | field 1 or field 2 |
| R2 | field 2 | field 2            |

OUTPUT CONFIGURATION











R = relay output

|    |  | 1      | 2      | 3      | 4      |  |
|----|---|--------|--------|--------|--------|--|
| R1 |   | A – NO | P – NC | P – NC | A – NO | A = active<br>P = passive                  |
| R2 |   | P – NC | A – NO | P – NC | A – NO | NO = normally open<br>NC = normally closed |

A = active  
P = passive

NO = normally open  
NC = normally closed

## TROUBLESHOOTING

|   |  |   |   |
|---|--|---|---|
|     | No blue LED  | No power  | Check cable and connection.   |
|   |  | Polarity of power supply is inverted                        | Check the polarity of the power supply.   |
|   |  | All LEDs have been deactivated by remote control            | Activate LEDs using remote control.   |
|    | Only blue LED is on                                | Test input is not connected                                 | Check wiring. The blue and blue/white cable must be connected to the test input or the power supply.  |
|    | Detection LED remains green                        | Detection field too small or deactivated                    | Check size of fields.   |
|   |  | Object size is too small                                    | Launch a Learn.   |
|    | Detection LED remains red                          | Someone/Something is in the detection field                 | Decrease minimum object size.   |
|   |  | Field is touching floor/wall/door – this leads to detection | Step out of the field and/or remove the any object(s) from the field.   |
|   |  |   | Activate the 3 red beams and check if the position of the sensor is correct. If not, adjust the hex screws.                                 |
|   |  |   | Verify the field size.  |
|    | Orange LED flashing and detection LEDs are red     |   | Launch a Learn.   |
|   |  | No background (reference point) is found                    | Check position of sensor.   |
|   |  |   | Check the mounting side setting. If no reference point is found, set the mounting side to value 3 to 5.                                     |
|    | Orange LED is on<br>Both detection LEDs are orange |   | Launch a new Learn.   |
|   |  | Sensor is masked  | Verify and clean the front screens with a damp cloth.   |
|   |  | Power supply voltage exceeds acceptable limits              | Check power supply voltage.   |
|   |  | Sensor exceeds temperature limits                           | Verify the temperature of the environment. Protect the sensor from sunlight using a cover, if necessary.                                    |
|  | Sensor does not respond to the remote control      | Internal error  | Wait a few seconds. If the LED remains ON, reset the power supply. If the LED turns on again, replace the sensor.                           |
|   |  | 30 minutes after last use, sensor locks access to RC        | Cut and restore power supply. RC is accessible again for 30 minutes.  |
|   |  | Remote control batteries not installed properly or are dead | Check battery orientation or replace the batteries.   |
|   |  | Remote control not pointed correctly                        | Point the remote control towards the sensor, but with a slight angle. The RC should not be pointed in a right angle in front of the sensor. |
|  | Sensor does not unlock                             | Reflective object is close to the sensor                    | Avoid highly reflective material in proximity to the sensor.  |
|   |  | Access code needs entered or an incorrect code was used     | Cut and restore power supply. No code is required to unlock during the first minute after powering.   |

# TECHNICAL SPECIFICATIONS

|                                   |   |                                   |                                     |  |
|-----------------------------------|---|-----------------------------------|-------------------------------------|--|
| Technology:                       | laser scanner, time-of-flight measurement   |                                   |                                     |  |
| Detection mode:                   | motion and presence   |                                   |                                     |  |
| Detection range:                  | Default: 33 ft x 33 ft @ 2% remission factor (max. 82 ft x 82 ft)   |                                   |                                     |  |
| Angular resolution:               | 0.3516°   |                                   |                                     |  |
| Min. detected object size (typ.): | 0.8 in @ 10 in<br>1.4 in @ 16 in<br>2.8 in @ 33 ft<br>6.9 in @ 82 ft  |                                   |                                     |  |
| Emission characteristics          |   |                                   |                                     |  |
| IR laser:                         | wavelength 905 nm; max. output pulse power 75 W (CLASS 1)   |                                   |                                     |  |
| Red visible laser:                | wavelength 650 nm; max. output CW power 3 mW (CLASS 3R)   |                                   |                                     |  |
| Supply voltage:                   | 10 – 35 VDC @ sensor side   |                                   |                                     |  |
| Power consumption:                | < 5 W   |                                   |                                     |  |
| Peak current @ power-on:          | 1.8 A (max. 80 ms @ 35 V)   |                                   |                                     |  |
| Cable length:                     | 30 ft   |                                   |                                     |  |
| Response time:                    | typ. 20 ms (max. 80 ms)<br>+ output activation delay  |                                   |                                     |  |
| Output:                           | 2 electronic relays (galvanic-isolated – polarity-free)   |                                   |                                     |  |
| Max. switching voltage:           | 35 VDC / 24 VAC   |                                   |                                     |  |
| Max. switching current:           | 80 mA (resistive)   |                                   |                                     |  |
| Switching time:                   | t <sub>ON</sub> =5 ms; t <sub>OFF</sub> =5 ms   |                                   |                                     |  |
| Output resistance:                | typ 30 Ω  |                                   |                                     |  |
| Voltage drop on output:           | < 0.7 V @ 20 mA   |                                   |                                     |  |
| Leakage current:                  | < 10 µA   |                                   |                                     |  |
| Input:                            | 2 optocouplers (galvanic-isolated – polarity-free)  |                                   |                                     |  |
| Max. contact voltage:             | 30 VDC (over-voltage protected)   |                                   |                                     |  |
| Voltage threshold:                | Log. H: >8 VDC      Log. L: <3 VDC  |                                   |                                     |  |
| Response time monitoring input:   | < 5 ms  |                                   |                                     |  |
| LED signal:                       | 1 blue LED: power-on status<br>1 orange LED: error status<br>2 bi-colored LEDs: detection/output status (green = no detection, red = detection) |                                   |                                     |  |
| Dimensions (D x W x H):           | 5.0 in x 3.6 in x 2.75 in (mounting bracket + 0.55 in)  |                                   |                                     |  |
| Material:                         | PC/ASA  |                                   |                                     |  |
| Color:                            | Black   |                                   |                                     |  |
| Mounting angles on bracket:       | -45°, 0°, 45°   |                                   |                                     |  |
| Rotation angles on bracket:       | -5 – 5°   |                                   |                                     |  |
| Tilt angles on bracket:           | -3 – 3°   |                                   |                                     |  |
| Protection degree:                | NEMA 4 / IP65   |                                   |                                     |  |
| Temperature range:                | -22 – 140 °F if powered      -14 – 140 °F if unpowered  |                                   |                                     |  |
| Humidity:                         | 0 – 95% non-condensing  |                                   |                                     |  |
| Vibrations:                       | < 2G  |                                   |                                     |  |
| Pollution on front screen:        | max. 30%, homogenous  |                                   |                                     |  |
| Norm conformity:                  | 2006/95/EC: LVD<br>2002/95/EC: RoHS   | 2004/108/EC: EMC<br>EN 60529:2001 | IEC 60825-1:2007<br>EN 60950-1:2005 | EN 61000-6-2:2005<br>EN 61000-6-3:2006 |

Specifications are subject to change without prior notice. All values measured in specific conditions.

BEA hereby declares that the LZR®-s600 is in conformity with the basic requirements and the other relevant provisions of the directives 2006/95/EC, 2002/95/EC, 2004/108/EC, and 2006/42/EC.

Notified Body for EC inspection: 0044 - TÜV NORD CERT GmbH, Langemarckstr. 20, 45141 D-Essen

EC-type examination certificate number: 44 205 11 392410-002

Angleur, May 2011, Jean-Pierre Valkenberg, Authorized representative and responsible for technical documentation

The complete declaration of conformity is available on our website: [www.bea-industrial.be](http://www.bea-industrial.be)

For EC countries: according to the directive 2012/19/EU for Waste Electrical and Electronic Equipment (WEEE)

#### ATTENTES DE CONFORMITÉ DE L'INSTALLATION/L'ENTRETIEN DE BEA

BEA, le fabricant du détecteur, ne peut pas être tenue responsable pour des installations incorrectes ou des ajustements inappropriés du détecteur/de l'appareil; par conséquent, BEA ne garantit aucun usage du capteur en dehors de son but prévu.

BEA recommande fortement que les techniciens d'installation et de services soient certifiés AAADM pour les portes piétonnières, certifiés IDA pour les portes/portails, et formés en usine pour le type de système de portes/portails.

Les installateurs et le personnel de service sont responsables d'exécuter une évaluation des risques à la suite de chaque installation/entretien, en s'assurant que l'installation du système de détecteurs est conforme avec les règlements, codes et normes locaux, nationaux et internationaux.

Une fois que l'installation ou l'entretien est terminé, une inspection de sécurité de la porte/du portail doit être effectuée selon les recommandations du fabricant ou les directives AAADM/ANSI/DASMA (le cas échéant) pour les meilleures pratiques de l'industrie. Les inspections de sécurité doivent être effectuées pendant chaque appel de service – vous pouvez trouver des exemples de ces inspections de sécurité sur l'étiquette d'information de sécurité (p. ex., ANSI/DASMA 102, ANSI/DASMA 107).

Vérifier que toute la signalisation appropriée de l'industrie et les étiquettes d'avertissement sont en place.



Support technique: 1-800-407-4545 | Service clients: 1-800-523-2462

Questions techniques générales: [Tech\\_Services@beainc.com](mailto:Tech_Services@beainc.com) | Les documents techniques: [www.BEAinc.com](http://www.BEAinc.com)

