




We open up New Horizons

10TD390 DIGITAL TRANSMITTER AND 10RD390 DIGITAL RECEIVER INSTRUCTION MANUAL

Receiver Mounting Instructions:


1. The receiver can be neatly concealed inside the door header or mounted outside the header.
2. If the receiver is installed inside the header, drill a discrete hole in the top of the header (1/8" Diameter) and route the antenna out of the header. This will improve the receiver's detection range. Use the flanges on the side of the receiver to mount the unit.
3. Wiring diagram:

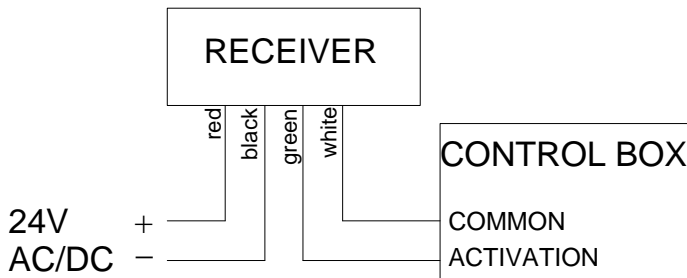

Programming the Receiver:

1. Open the receiver by squeezing the sides of the cover. Locate the Learn Code Button and the Radio Signal Indicator Light on the digital receiver. See below.
2. Press and release the Learn Code Button. The indicator light will blink approximately 2 times per second.
3. Press the button on the transmitter once within 30 seconds. The indicator light will stay lit and not blink.
4. Press the same transmitter button within the 30 seconds. The indicator light will go out.

NOTE: If the second transmitter code is not pushed within 30 seconds, the indicator light will blink approximately 4 times per second, then programming will stop. If this happens, repeat steps 1-4.

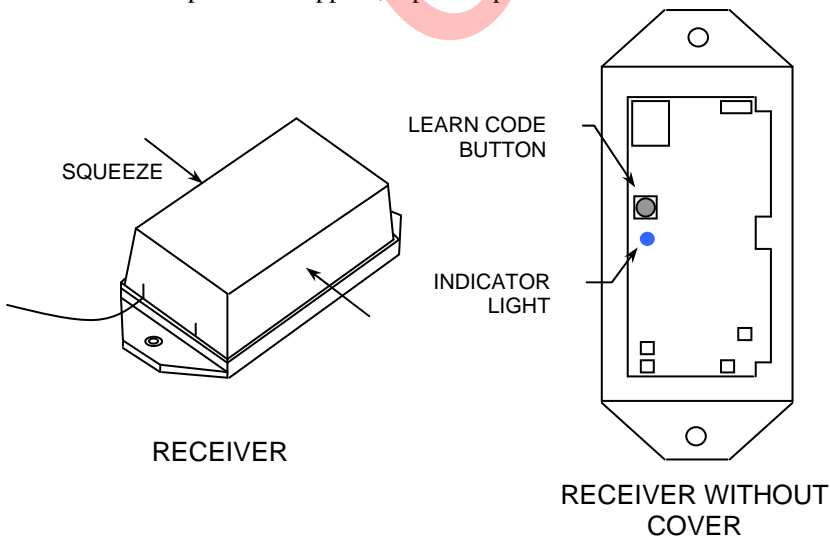


Erasing all Receiver Memory:

1. Press and hold the Learn Code Button for 10 seconds or until the Radio Signal Indicator light goes out.

Replacing Transmitter Batteries:

1. Turn the transmitter upside down.
2. Gently push IN the tab using a coin, small screwdriver or ballpoint pen then flip the battery cover open

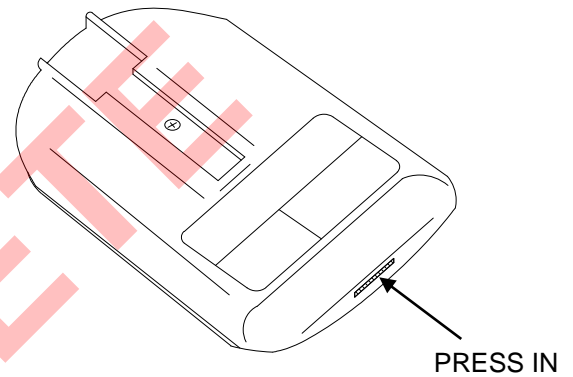

3. Install new battery in the same position. Use a number A23, 12.0-Volt (lighter type).
4. Close battery cover.

Transmitter Mounting Instructions:

1. The transmitter may be mounted to a gang box or B.E.A. pushplate mounting box using the Velcro tabs included. Also, there is a visor-mounting clip included for other mounting options.
2. If the transmitter is to be connected to a pushplate, connect one wire to the NO terminal and one to the COM terminal.

If after troubleshooting a problem, a satisfactory solution cannot be achieved, please call B.E.A., Inc. for further assistance during Eastern Standard Time at

**1-800-523-2462 from 7am - 5pm or
1-800-407-4545 from 5pm - midnight & weekends.**

DO NOT leave any problem unresolved. If you must wait for the following workday to call B.E.A., leave the door inoperable until satisfactory repairs can be made. **NEVER** sacrifice the safe operation of the automatic door or gate for an incomplete solution.